

FILE NO.

SERVICE MANUAL

Remote Control Digital Color Television

DP37649 (U.S.A.) (CANADA)

ORIGINAL VERSION



Chassis No. P37649-00

NOTE: Match the Chassis No. on the unit's back cover with the Chassis No. in the Service Manual.

> If the Original Version Service Manual Chassis No. does not match the unit's, additional Service Literature is required. You must refer to "Notices" to the Original Service Manual prior to servicing the unit.

Servicing should be performed by only trained and qualified service personnel.

Contents ON-SCREEN SERVICE MENU 4 MECHANICAL DISASSEMBLY 6 CHASSIS ELECTRICAL PARTS LIST...... 8 COMPONENT AND TESTPOINT LOCATIONS 24 BLOCK DIAGRAM POWER LINES......27 CONTROL PORT FUNCTIONS......40 SIGNAL FLOW CHARTS42 IC, DIODE, AND TRANSISTOR PIN LAYOUTS.....51 PC BOARD CONNECTIONS AND LOCATIONS 52 CAPACITOR AND RESISTOR CODE CHART53 SCHEMATIC DIAGRAMS......54

Specifications

POWER RATING 120VAC
180 W (AVG.)
ANTENNA INPUT IMPEDANCE
UHF/VHF/CATV
DIGITAL
RECEIVING CHANNEL 2 - 13 (VHF),
14 - 69 (UHF),
01, 14-94, 95-135 (CATV)
1-135 (DIGITAL)
REMOTE READY 32 KEY REMOTE CONTROL
SOUND OUTPUT 5.0 W/CH
INTERMEDIATE FREQUENCY
PICTURE IF CARRIER 45.75MHz
SOUND IF CARRIER 41.25MHz
COLOR SUB CARRIER 42.17MHz
CABINET DIMENSIONS
WIDTH
HEIGHT 694mm
DEPTH INCLUDING BASE

SAFETY INSTRUCTIONS

SAFETY PRECAUTIONS

WARNING: The chassis of this receiver has a floating ground with the potential of one half the AC line voltage in respect to earth ground. Service should not be attempted by anyone not familiar with the precautions necessary when working on this type of equipment.

The following precautions must be observed:

- An isolation transformer must be connected in the power line between the receiver and the AC line before any service is performed on the receiver.
- Comply with all caution and safety-related notes provided inside the cabinet, on the chassis, and on the back.
- 3. When replacing a chassis in the cabinet, always be certain that all the protective devices are installed properly, such as control knobs, adjustment covers, shields and barriers.
- Before replacing the back cover of the set, thoroughly inspect the inside of the cabinet to see that no stray parts or tools have been left inside.

Before returning any television to the customer, the service technician must perform the following safety checks to be sure that the unit is completely safe to operate without danger of electrical shock.

ANTENNA COLD CHECK

Remove AC plug from the 120 VAC outlet and place a jumper across the two blades. Connect one lead of an ohmmeter to the jumpered AC plug, and touch the other lead to each exposed antenna terminal (UHF and VHF antenna terminals). The resistance must measure between 1M ohm and 5.2M ohm. Any resistance value below or above this range indicates an abnormality which requires corrective action.

LEAKAGE CURRENT CHECK

Plug the AC line cord directly into a 120 VAC outlet. (Do not use an isolation transformer for this check.) Use an AC voltmeter, that has 5000 ohms per volt or more sensitivity. Connect a 1500 ohm 10 watt resistor, paralleled by a 0.15 μF 150 VAC capacitor, between a known good earth ground (water pipe, conduit, etc.) and all exposed metal parts of the cabinet (antennas, handle bracket, metal cabinet, screw heads, metal overlays, control shafts, etc.). Measure the AC voltage across the 1500 ohm resistor. The AC voltage should not exceed 750 mV. A reading exceeding 750 mV indicates that a dangerous potential exists. The fault must be located and corrected. Repeat the above test with the receiver power plug reversed.

NEVER RETURN A RECEIVER TO THE CUSTOMER WITHOUT TAKING THE NECESSARY CORRECTIVE ACTION.

PRODUCT SAFETY NOTICE

When replacing components in a receiver, always keep in mind the necessary product safety precautions. Pay special attention to the replacement of components marked with a \triangle in the parts list and in the schematic diagrams. To ensure safe product operation, it is necessary to replace those components with the exact same PARTS.

READING SHOULD NOT EXCEED 750 mV.

AC VOLTMETER
(5000 ohms per volt or more sensitivity)

TELEVISION
RECEIVER

Good earth ground such as a water pipe, conduit, etc.

0.15 µF 150V AC

To be touched to all of exposed metal parts.

Voltmeter Hook-up for Leakage Current Check.

AC OUTLET

SERVICING ELECTROSTATICALLY SENSITIVE DEVICES

Semiconductors (solid-state devices) that can be damaged by static electricity are referred to as Electrostatically Sensitive (ES) devices. Examples of typical ES devices are: Integrated Circuits (IC), Field-Effect Transistors (FET), and "chip" components. The following techniques should be observed strictly, to reduce the occurrence of semiconductor damage due to electrostatic discharge.

- Immediately prior to handling any semiconductor component or an assembly containing a semiconductor device or devices, discharge the electrostatic buildup on your body by touching a known earth ground. You may also obtain and wear a commercially available discharging wrist strap device.
 - CAUTION: Be sure to remove the wrist strap before applying power to any unit being serviced.
- After removing an ES equipped assembly, place it on a conductive surface, such as, aluminum foil, to prevent buildup or exposure to static electricity.
- Use only grounded-tip soldering irons to solder or unsolder ES devices.
- Use only anti-static solder removal devices. Some suction-type devices can generate static electricity adequate to damage ES devices.
- 5. A replacement ES device will come packaged in protective material (conductive foam, aluminum foil, or some comparable conductive material). Do Not remove an ES device from its protective packaging unless you are prepared to install it immediately.
- Precisely prior to removing an ES device from its protective packaging, touch the protective packaging to the chassis or assembly in which the device will be installed.
 - CAUTION: Be sure that no power is applied to the chassis or circuit assembly.
- Incidental body movements, such as, lifting a foot from a carpeted floor or the rubbing of fabric together can generate static electricity sufficient to damage ES devices. Therefore, minimize all body movements while handling exposed (unpackaged) ES devices.

SERVICE ADJUSTMENTS

GENERAL

This set has an On-screen Service Menu system included in the CPU that allows remote operation for most of the service adjustments.

ON-SCREEN SERVICE MENU SYSTEM

1. Enter the Service Menu:

- Turn off the receiver and disconnect the AC power supply.
- While pressing the Volume (-) button on the television, reconnect the AC power supply. The Service Menu will now appear. The remote can now be used to make adjustments. See Figure 1 below.

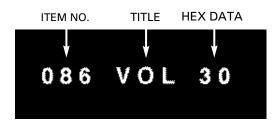



Figure 1. Service Menu Display


2. Service Adjustments:

- Press the Cursor ▲ and ▼ key to select the desired service menu item you want to adjust. See page 4 for the On-screen Service Menu.

3. Exit from the Service Menu:

 Press the MENU key to turn off the Service Menu display.

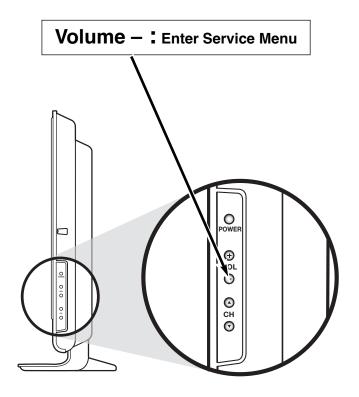

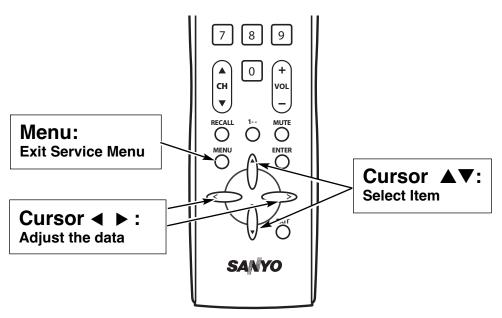

ON-SCREEN SERVICE MENU

Table 1. ON-SCREEN SERVICE MENU

When IC801 (EEPROM) is replaced, check the bus data to confirm they are the same as below. See page 3 for On-Screen Service Menu access and adjustments.

No.	Title	Initial Data	Note	
1A0	MUTE	A0h	Audio mute at Power ON	
086	VOL	30h	Volume setup inspection	
087	OP1	00h	Option 1 Data (HDMI)	
088	OP2	21h	Option 2 Data (Display Panel)	
101	1R00	00h	ROM Correction Data	
102	1R01	00h	ROM Correction Data	
\downarrow	V	↓	↓	
197	2R47	00h	ROM Correction Data	
198	2R48	00h	ROM Correction Data	

- All data except in gray box area is fixed. Do not change for correct operating.
- Data in gray box is initial and can be set according to adjusment information.

PROGRAM CODES

The microprocessor used in this model is a multi-purpose type and is used in several different models. To ensure proper operation and the correct features for your particular model, the program codes must be correct.

Note 1. Option Data 1 (NO. 087 OP1) should be hexadecimal 00. See 087 above. If this program code is wrong the TV will not operate properly.

Note 2. Option Data 2 (NO. 088 OP2) should be hexadecimal 21. See 088 above. If this program code is wrong the TV will not operate properly.

POWER FAILURE CIRCUIT

CPU (IC800) is programmed so the set will go to standby mode when there is circuit failure as described below. (Refer to "Block Diagram Power Lines".)

This unit is equipped with a Power Failure Detector function included in the CPU which checks for an abnormal condition in the chassis power supplies.

If, while the power is on, a failure is caused by any of the following that results in a low voltage supply, the CPU will turn the unit off in 1.5 seconds to prevent further damage:

- Failure within the power supply circuits.
- A short circuit in the load side from the supply.

Power Failure: Detected voltage failure for circuit. (Connected to IC800 pin 48 and pin 23.)


(Normal: High; Failure: Low)

If, while the power is off, the power is switched on and any of these failures remains uncorrected, the CPU will shut off the power within three seconds.

Check the following if the unit is turned off by the power failure detector.

- Disconnect the AC power cord (120V AC line) for a short time.
- 2. Connect a DC Voltmeter to the circuits shown below.
- 3. Press the Power key and check for the proper voltage supplies.
- 4. If any of these voltages is low, the power failure detector should turn the unit off within three seconds.
- 5. Check all circuits shown below.

Note: If power failure is detected 3 times in 15 minutes, the set will enter the standby mode and cannot be switched On.To reset the operating programs of the CPU it is necessary to disconnect the AC cord for a short time.

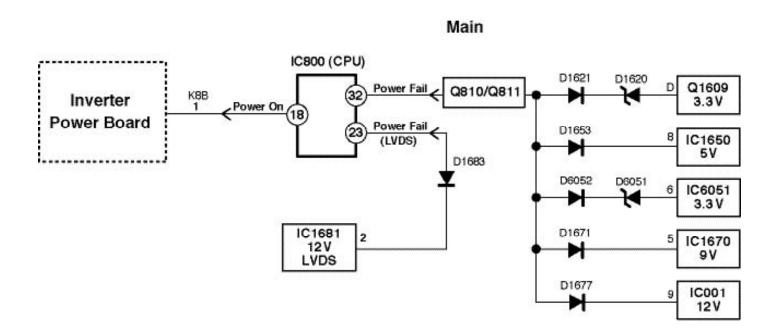


MECHANICAL DISASSEMBLY

CAUTION:

This LCD TV uses several different kinds of screws. Using the correct screw is necessary to prevent damage. Lead wires must be redressed to their previous locations after servicing. The Earth sheet and gasket are provided to prevent interference to other radio and television receivers. The Earth sheet and gasket should be returned to its previous position after servicing.

BACK CABINET REMOVAL


Remove 14 screws to take the back cabinet off. (A:4x14, 13 pcs.; B:4x8, 1 pc.)

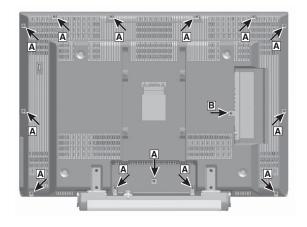

STAND REMOVAL

Note: Position TV face down on a padded or cushioned surface to protect the screen and finish.

Remove 4 screws (E:5x10) to take the stand off.

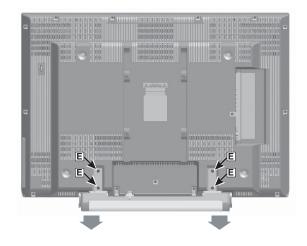

1. MAIN BOARD REMOVAL

Remove 6 screws (C:3X14) to take the Main Board off.

2. POWER UNIT REMOVAL


Remove 6 screws (C:3X6) to take the Power Unit off.

3. CONTROL BOARD REMOVAL

Remove 2 screws (A:3X14) to take the Control Board off.

4. SPEAKER REMOVAL

Remove 4 screws (A:3X14) to take the Power Unit off.

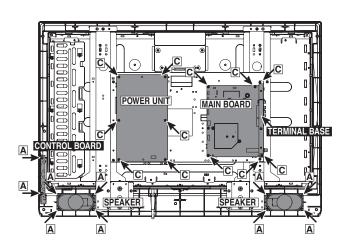


ELECTROSTATICALLY SENSITIVE DEVICES



Many solid-state devices (especially Integrated Circuits) are Electrostatically Sensitive, and, therefore, require special handling techniques as described under "Servicing Electrostatically Sensitive Devices," on page two in this service literature.

LCD PANEL REMOVAL

- 1. Disconnect the lead wires from LCD panel, speakers and control board.
- 2. Remove 14 screws (A:4x14, 12 pcs.; B:4x8, 8 pcs.) to take the mounting frames with chassis plate, power unit and main board off.
- 3. Lift up the LCD panel from front cabinet.

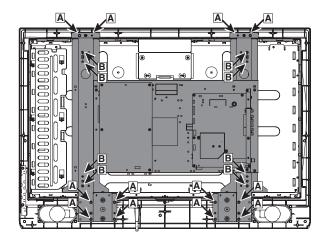

CHASSIS ELECTRICAL PARTS LIST

CAUTION: To Protect against electrical shock and for continued product safety, refer to SAFETY PRECAUTIONS and PRODUCT SAFETY NOTICE on Page 2.

PRODUCT SAFETY NOTICE

PRODUCT SAFETY SHOULD BE CONSIDERED WHEN A REPLACEMENT IS MADE IN ANY AREA OF A RECEIVER. COMPONENTS INDICATED BY A \triangle IN THIS PARTS LIST AND THE SCHEMATIC DIAGRAM DESIGNATE COMPONENTS IN WHICH SAFETY CAN BE OF SPECIAL SIGNIFICANCE. IT IS PARTICULARLY RECOMMENDED THAT ONLY PARTS DESIGNATED ON THE FOLLOWING PARTS LIST BE USED FOR COMPONENT REPLACEMENT DESIGNATED BY A \triangle . NO DEVIATIONS FROM RESISTANCE, WATTAGE, AND VOLTAGE RATINGS MAY BE MADE FOR REPLACEMENT ITEMS DESIGNATED BY A \triangle .

Note: Schematic part location numbers may not always match with the part descriptions. The part descriptions are correct and should be used.


Schematic Location	Part No.	Description
-----------------------	----------	-------------

Schematic Location Part No. Description

CAPACITORS

NOTES:

Read description of the Capacitor as follows:

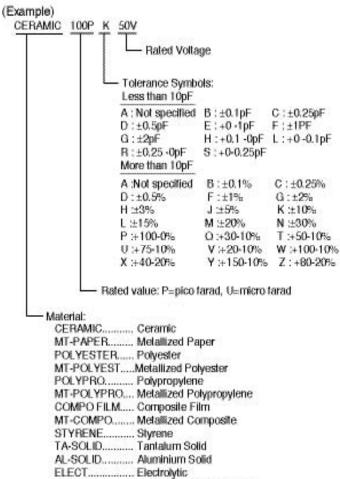


NP-ELECT...... Non-polarised Electrolytic OS-SOLID....... Aluminium Solid with Organic

Semiconductive Electrolytic

RESISTORS

Read description of the Resistor as follows:

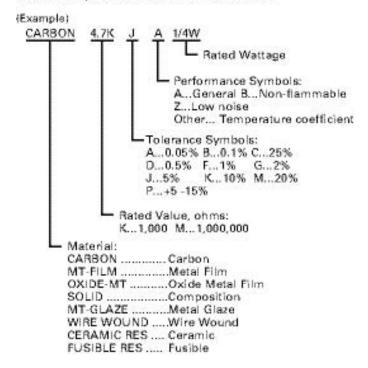

Schematic Location	Part No.	Des	scription		Schematic Location	Part No.	Description		
	CAPACITOR	S			C1621	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C001	CPXLB1C100YAJ	NP-ELECT	10U M	16V	C1622	CK1H103KLZBNG	CERAMIC	0.01U K	50V
	CPXLB1C100ZAJ	NP-ELECT	10U M	16V	C1623	CK1H103KLZBNG	CERAMIC	0.01U K	50V
C002	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C1624	CK1H103KLZBNG	CERAMIC	0.01U K	50V
C006	CEXLB1H100VDJ	ELECT	10U M	50V	C1625	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C007	CEXLB1C101VDJ	ELECT	100U M	16V	C1626	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C008	CK1H102KLZBNG	CERAMIC	1000P K	50V	C1627	CE0J102MZVALC	ELECT	1000U M	6.3V
C009	CK1H102KLZBNG	CERAMIC	1000P K	50V		CEXLB0J102VEJ	ELECT	1000U M	6.3V
C013	CPXLB1C100YAJ	NP-ELECT	10U M	16V	C1628	CEXLB0J102VDJ	ELECT	1000U M	6.3V
00.0	CPXLB1C100ZAJ	NP-ELECT	10U M	16V	C1629	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C015	CEXLB1C222VDJ	ELECT	2200U M	16V	C1630	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C016	CEXLB1H100VDJ	ELECT	10U M	50V	C1631	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C017	CEXLB1H100VDJ	ELECT	10U M	50V	C1641	CE1E102MZVANC	ELECT	1000U M	25V
C801	CK1A105KLZBNG	CERAMIC	1U K	10V		CEXLB1E102VEJ	ELECT	1000U M	25V
C802	CK1H104KLZBNG	CERAMIC	0.1U K	50V	C1642	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C803	CEXLB1V470VDJ	ELECT	47U M	35V	C1647	CEXLB0J102VDJ	ELECT	1000U M	6.3V
C804	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C1648	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C805	CK1H103KLZBNG	CERAMIC	0.01U K	50V	C1649	CK1A105KLZBNG	CERAMIC	1U K	10V
C807	CK1H104ZLZFNG	CERAMIC	0.010 K	50V	C1650	CK1H104KLZBNG	CERAMIC	0.1U K	50V
C809	CC1H220JLZCNG	CERAMIC	22P J	50V	C1655	CK1H103KLZBNG	CERAMIC	0.01U K	50V
C810	CC1H220JLZCNG	CERAMIC	22P J	50V	C1656	CK1H103KLZBNG	CERAMIC	0.01U K	50V
C811	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C1657	CEXLB1E102VDJ	ELECT	1K U M	25V
C812	CC1H470JLZCNG	CERAMIC	47P J	50V	C1658	CK1H222KLZBNG	CERAMIC	2200P K	50V
C813	CC1H470JLZCNG	CERAMIC	47F J	50V	C1659	CK1H103KLZBNG	CERAMIC	0.01U K	50V
C814	CK1H103KLZBNG	CERAMIC	0.01U K	50V	C1660	CK1H104KLZBNG	CERAMIC	0.1U K	50V
C816	CK1H104ZLZFNG	CERAMIC	0.010 K	50V	C1669	CEXLB1V471VDJ	ELECT	470U M	35V
C818	CK111104ZLZING CK1H222KLZBNG	CERAMIC	2200P K	50V	C1670	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C819	CEXLB0J221VDJ	ELECT	2200F K	6.3V	C1672	CEXLB1C101VDJ	ELECT	100U M	16V
C821	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C1673	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C822	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V	C1675	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C823	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V	C1678	CEXLB1C101VDJ	ELECT	100U M	16V
C824	CK1H103KLZBNG	CERAMIC	0.10 Z 0.01U K	50V	C1679	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C825	CC1H470JLZCNG	CERAMIC	47P J	50V	C1680	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1002	CEXLB1V470VDJ	ELECT	47U M	35V	C1681	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1002	CEXLB1H4R7VDJ	ELECT	4.7 U M	50V	C1682	CK1H104ZLZFNG	CERAMIC	0.1U Z	
C1003	CEXLB1H4R7VDJ	ELECT	4.7 U M	50V	C1683	CEXLB1V471VDJ	ELECT	470U M	35V
C1004	CEXLB1H100VDJ	ELECT	10U M	50V	C1684	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1011	CEXLB1H100VDJ	ELECT	100 M	50V	C1685	CEXLB1E102VDJ	ELECT	1K U M	25V
C1012	CEXLB1H100VD3	ELECT	4.7 U M	50V	C1686	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1014	CEXLB1H4R7VDJ	ELECT	4.7 U M	50V	C1687	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1014	CEXLB1H4R7VDJ	ELECT	4.7 U M	50V	C1689	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1015	CEXLB1H4R7VDJ	ELECT	4.7 U M	50V	C1690	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1017	CEXLB1H4R7VDJ	ELECT	4.7 U M	50V	C1693	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1205	CEXLB1V470VDJ	ELECT	4.7 U M	35V	C1694	CEXLB1V470VDJ	ELECT	47U M	35V
C1251	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C1803	CK0J106KGMBNG	CERAMIC	10U Z	6.3V
C1606	CK1H104ZLZFNG	CERAMIC	0.10 Z 0.1U Z	50V	C1810	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1608	CK1H104ZLZFNG	CERAMIC	0.10 Z 0.1U Z	50V	C1811	CEXLB1C101VDJ	ELECT	100U M	16V
C1609	CK1H104ZLZFNG	CERAMIC	0.10 Z 0.1U Z	50V 50V	C1903	CEXLB1V470VDJ	ELECT	47U M	35V
C1610	CEXLB1E102VDJ	ELECT		25V	C1904	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C1611			1K U M	25 V 50 V	C1905	CC1H470JLZCNG	CERAMIC	47P J	50V
	CK1H104ZLZFNG	CERAMIC	0.1U Z		C3200	CK1A105KLZBNG	CERAMIC	1U K	10V
C1612	CC1H221JLZCNG	CERAMIC	220P J	50V	C3201	CK1A105KLZBNG	CERAMIC	10 K	10V
C1613	CK1H104KLZBNG	CERAMIC	0.1U K	50V	C3202	CK1A105KLZBNG	CERAMIC	10 K	10V
C1614	CK1H104KLZBNG	CERAMIC	0.1U K	50V	C3203	CK1A105KLZBNG	CERAMIC	10 K	10V
C1617	CK1H103KLZBNG	CERAMIC	0.01U K	50V	C3204	CK1H223KLZBNG	CERAMIC	0.022U K	50V
C1618	CK1H392KLZBNG	CERAMIC	3900P K	50V	C3205	CK1H222KLZBNG	CERAMIC	2200P K	50V
C1620	CK1H103KLZBNG	CERAMIC	0.01U K	50V	00200	ONTILLENCEDING	OLI I/AIVIIO	22001 IV	00 V

Schematic Location	Part No.	De	scription			Schematic Location	Part No.	De	escription	
C3206	CK1H104KLZBNG	CERAMIC	0.1U K	50V	•	C5547	CK0J106KGMBNG	CERAMIC	10U Z	6.3V
C3208	CK1A105KLZBNG	CERAMIC	1U K	10V		C5548	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C3209	CK1A105KLZBNG	CERAMIC	1U K	10V		C5549	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C3210	CK1A105KLZBNG	CERAMIC	1U K	10V		C5551	CK1H103KLZBNG	CERAMIC	0.01U K	50V
C3211	CK1A105KLZBNG	CERAMIC	1U K	10V		C5552	CK1H102KLZBNG	CERAMIC	1000P K	50V
C3212	CK1A105KLZBNG	CERAMIC	1U K	10V		C5553	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C3213	CK1A105KLZBNG	CERAMIC	1U K	10V		C5554	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C3214	CK1A105KLZBNG	CERAMIC	1U K	10V		C5555	CK0J106KGMBNG	CERAMIC	10U Z	6.3V
C3215	CK1H222KLZBNG	CERAMIC	2200P K	50V		C5556	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C3216	CK1H104KLZBNG	CERAMIC	0.1U K	50V		C5557	CK1H103KLZBNG	CERAMIC	0.01U K	50V
C3217	CK1A105KLZBNG	CERAMIC	1U K	10V		C5558	CK1H102KLZBNG	CERAMIC	1000P K	50V
C3218	CK1A474KLZBNG	CERAMIC	0.47U K	10V		C5559	CE1V470MZVALC	ELECT	47U M	35V
C3219	CK1A105KLZBNG	CERAMIC	1U K	10V		00000	CEXLB1V470VEJ	ELECT	47U M	35V
C3220	CK1A105KLZBNG	CERAMIC	1U K	10V		C5563	CK1A105KLZBNG	CERAMIC	1U K	10V
C3221	CK1A105KLZBNG	CERAMIC	1U K	10V		C5564	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C3222	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C5565	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C3223	CEXLB1C222VDJ	ELECT	2200U M	16V		C5566	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5501	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C5567	CK0J106KGMBNG	CERAMIC	10U Z	6.3V
C5502	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C5568	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5503	CC1H5R0CLZCNG	CERAMIC	5P C	50V		C5569	CK1H103KLZBNG	CERAMIC	0.01U K	50V
C5504	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C5571	CK1H102KLZBNG	CERAMIC	1000P K	50V
C5505	CC1H5R0CLZCNG	CERAMIC	5P C	50V		C5573	CK0J106KGMBNG	CERAMIC	10U Z	6.3V
C5506	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C5574	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5507	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C5575	CK1H103KLZBNG	CERAMIC	0.10 Z 0.01U K	50V
C5508	CE1V470MZVALC	ELECT	47U M	35V		C5576	CK1H102KLZBNG	CERAMIC	1000P K	50V
C5508	CEXLB1V470VEJ	ELECT	47U M	35V		C5577	CK1A105KLZBNG	CERAMIC	1000F K	10V
C5509	CK1H103KLZBNG	CERAMIC	0.01U K	50V		C5578	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5511	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C5579	CK1A105KLZBNG	CERAMIC	1U K	10V
C5512	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V		C5581	CK1H104KLZBNG	CERAMIC	0.1U K	50V
C5513	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C5582	CK1H104KLZBNG	CERAMIC	0.10 K	50V
C5514	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C5583	CK1H104KLZBNG	CERAMIC	0.10 K	50V
C5515	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C5584	CK1H104KLZBNG	CERAMIC	0.10 K	50V
C5516	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V		C5585	CK1H104KLZBNG	CERAMIC	0.10 K 0.1U K	50V
C5517	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V		C5586	CK1H104KLZBNG	CERAMIC	0.10 K	50V
C5519	CK1A105KLZBNG	CERAMIC	1U K	10V		C5587	CK1H104KLZBNG	CERAMIC	0.10 K	50V
C5522	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C5588	CK1H104KLZBNG	CERAMIC	0.10 K	50V
C5523	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V		C5589	CK1H104KLZBNG	CERAMIC	0.10 K	50V
C5524	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V		C5591	CK1H104KLZBNG	CERAMIC	0.10 K 0.1U K	50V
C5525	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V		C5592	CK1H104KLZBNG	CERAMIC	0.10 K	50V
C5526	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V		C5593	CK1H103KLZBNG	CERAMIC	0.10 Z 0.01U K	50V
C5527	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V		C5594	CK1H103KLZBNG	CERAMIC	0.010 K 0.022U K	50V
C5528	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V		C5594	CK1H2Z3KLZBNG CK1H104ZLZFNG	CERAMIC	0.0220 K 0.1U Z	50V
C5529	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V		C5597	CK0J106KGMBNG	CERAMIC	10U Z	6.3V
C5531	CK111104ZLZTNG	CERAMIC	1U K	10V		C5598	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5532	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C5599	CE1V470MZVALC	ELECT	47U M	35V
C5534	CK1H104ZLZFNG	CERAMIC	0.10 Z	50V		05599	CEXLB1V470VEJ	ELECT	47U M	35V
C5535	CK111104ZLZING CK1A105KLZBNG	CERAMIC	1U K	10V		05601	CEOJ221MZVALC			
C5536	CK1H104ZLZFNG		0.1U Z	50V		C5601		ELECT	220U M	6.3V
C5537	CK0J106KGMBNG	CERAMIC CERAMIC	10U Z	6.3V		CEGOO	CEXLBOJ221VEJ	CERAMIC	220U M	6.3V
	CK1H104ZLZFNG			6.3V 50V		C5602	CK1H104KLZBNG	CERAMIC	0.1U K	50V
C5538		CERAMIC	0.1U Z			C5603	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5539	CK1A105KLZBNG	CERAMIC	1U K	10V		C5605	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5541	CK1A105KLZBNG	CERAMIC	1U K	10V		C5606	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5543	CK0J106KGMBNG	CERAMIC	10U Z	6.3V		C5608	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5544	CK1A105KLZBNG	CERAMIC	1U K	10V		C5609	CE0J221MZVALC	ELECT	220U M	6.3V
C5545	CK1A105KLZBNG	CERAMIC	1U K	10V			CEXLB0J221VEJ	ELECT	220U M	6.3V
C5546	CK1A105KLZBNG	CERAMIC	1U K	10V						

Schematic Location	Part No.	Des	cription		Schematic Location	Part No.	De	escription	
C5611	CC1H470JLZCNG	CERAMIC	47P J	50V	C5683	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5612	CC1H470JLZCNG	CERAMIC	47P J	50V	C5684	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5614	CC1H470JLZCNG	CERAMIC	47P J	50V	C5685	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5615	CC1H470JLZCNG	CERAMIC	47P J	50V	C5686	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5617	CC1H470JLZCNG	CERAMIC	47P J	50V	C5687	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5618	CC1H470JLZCNG	CERAMIC	47P J	50V	C5688	CK1A105KLZBNG	CERAMIC	1U K	10V
C5621	CC1H470JLZCNG	CERAMIC	47P J	50V	C5689	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5622	CC1H470JLZCNG	CERAMIC	47P J	50V	C5695	CK1A105KLZBNG	CERAMIC	1U K	10V
C5624	CK1H104KLZBNG	CERAMIC	0.1U K	50V	C5696	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5625	CK1H104KLZBNG	CERAMIC	0.1U K 47P J	50V 50V	C5698 C5699	CK1H104ZLZFNG	CERAMIC	0.1U Z 0.1U Z	50V
C5627 C5628	CC1H470JLZCNG CC1H470JLZCNG	CERAMIC CERAMIC	47P J 47P J	50V 50V	C5701	CK1H104ZLZFNG CE0J221MZVALC	CERAMIC ELECT	220U M	50V 6.3V
C5629	CK1H104ZLZFNG	CERAMIC	47P J 0.1U Z	50V 50V	65701	CEXLB0J221VEJ	ELECT	220U M	6.3V
C5631	CK111104ZLZING CK1A105KLZBNG	CERAMIC	1U K	10V	C5702	CK1A105KLZBNG	CERAMIC	1U K	10V
C5632	CK1A105KLZBNG	CERAMIC	10 K	10V	C5702	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5633	CK1A105KLZBNG	CERAMIC	1U K	10V	C5704	CK1A105KLZBNG	CERAMIC	1U K	10V
C5634	CK1A105KLZBNG	CERAMIC	1U K	10V	C5705	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5635	CK1A105KLZBNG	CERAMIC	1U K	10V	C5706	CK1A105KLZBNG	CERAMIC	1U K	10V
C5636	CK1A105KLZBNG	CERAMIC	1U K	10V	C5707	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5637	CK1A105KLZBNG	CERAMIC	1U K	10V	C5708	CK1A105KLZBNG	CERAMIC	1U K	10V
C5638	CK1A105KLZBNG	CERAMIC	1U K	10V	C5709	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5639	CK1A105KLZBNG	CERAMIC	1U K	10V	C5710	CC1H471JLZCNG	CERAMIC	470P J	50V
C5641	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5711	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5642	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5712	CK1A105KLZBNG	CERAMIC	1U K	10V
C5643	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5713	CK1A105KLZBNG	CERAMIC	1U K	10V
C5644	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5714	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5645	CK1A105KLZBNG	CERAMIC	1U K	10V	C5715	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5646	CK1A105KLZBNG	CERAMIC	1U K	10V	C5716	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5647	CK1A105KLZBNG	CERAMIC	1U K	10V	C5717	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5651	CK1A105KLZBNG	CERAMIC	1U K	10V	C5718	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5652	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5719	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5653	CK1A105KLZBNG CC1H470JLZCNG	CERAMIC	1U K 47P J	10V 50V	C5720	CK1H104ZLZFNG CK1H104ZLZFNG	CERAMIC	0.1U Z 0.1U Z	50V
C5654 C5655	CC1H470JLZCNG	CERAMIC CERAMIC	47P J 47P J	50V 50V	C5721 C5722	CC1H471JLZCNG	CERAMIC CERAMIC	470P J	50V 50V
C5656	CK1A105KLZBNG	CERAMIC	47F J 1U K	10V	C5723	CK1A105KLZBNG	CERAMIC	470F 3 1U K	10V
C5657	CK1A105KLZBNG	CERAMIC	10 K	10V	C5724	CK1A105KLZBNG	CERAMIC	10 K	10V
C5661	CK1A105KLZBNG	CERAMIC	10 K	10V	C5725	CK1A105KLZBNG	CERAMIC	1U K	10V
C5662	CK1A105KLZBNG	CERAMIC	1U K	10V	C5726	CK1A105KLZBNG	CERAMIC	1U K	10V
C5663	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5727	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5664	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5728	CK1A105KLZBNG	CERAMIC	1U K	10V
C5665	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5729	CK1A105KLZBNG	CERAMIC	1U K	10V
C5666	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5730	CK1H103KLZBNG	CERAMIC	0.01U K	50V
C5667	CK1A105KLZBNG	CERAMIC	1U K	10V	C5731	CK1A105KLZBNG	CERAMIC	1U K	10V
C5668	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5732	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5669	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5733	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5671	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5734	CK1A105KLZBNG	CERAMIC	1U K	10V
C5672	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5735	CK1A105KLZBNG	CERAMIC	1U K	10V
C5673	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5736	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5674	CK1A105KLZBNG	CERAMIC	1U K	10V	C5737	CK1A105KLZBNG	CERAMIC	1U K	10V
C5675	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5738	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5676	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5739	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5677	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5741	CK1A105KLZBNG	CERAMIC	1U K	10V
C5678	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5742	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5679	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	C5743	CK1A105KLZBNG	CERAMIC	1U K	10V
C5681 C5682	CK1H104ZLZFNG CK1A105KLZBNG	CERAMIC	0.1U Z 1U K	50V	C5744 C5745	CK1H104ZLZFNG CK1H104ZLZFNG	CERAMIC	0.1U Z 0.1U Z	50V 50V
U300Z	UNIATUONLZBING	CERAMIC	IUK	10V	U0740	ON ITHIU4ZLZFNU	CERAMIC	U. IU Z	507

Schematic Location	Part No.	De	scription			Schematic Location	Part No.	De	scription	
C5746	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	-	C6111	CEXLB0J102VDJ	ELECT	1000U M	6.3V
C5747	CK1A105KLZBNG	CERAMIC	1U K	10V		C6112	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5748	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C6118	CK1H103KLZBNG	CERAMIC	0.01U K	50V
C5751	CE1V470MZVALC	ELECT	47U M	35V		C6119	CK1H103KLZBNG	CERAMIC	0.01U K	50V
	CEXLB1V470VEJ	ELECT	47U M	35V		C6121	CC1H120JLZCNG	CERAMIC	12P J	50V
C5755	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C6122	RGFR000ZTCANL	MT-GLAZE	0.000 ZA	
C5756	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C6123	CC1H12OJLZCNG	CERAMIC	12P J	50V
C5761	CK0J106KGMBNG	CERAMIC	10U Z	6.3V		C6124	RGFR000ZTCANL	MT-GLAZE	0.000 ZA	
C5762	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C6125	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5763	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C6201	CC1H471JLZCNG	CERAMIC	470P J	50V
C5764	CK0J106KGMBNG	CERAMIC	10U Z	6.3V		C6202	CC1H680JLZCNG	CERAMIC	68P J	50V
C5765	CK1A105KLZBNG	CERAMIC	1U K	10V 50V		C6203	CC1H680JLZCNG	CERAMIC	68P J 68P J	50V
C5766 C5767	CK1H104ZLZFNG CK0J106KGMBNG	CERAMIC CERAMIC	0.1U Z 10U Z	6.3V		C6204 C6205	CC1H680JLZCNG CC1H471JLZCNG	CERAMIC	470P J	50V 50V
C5802	CC1H680JLZCNG	CERAMIC	68P J	50V		C6205	CC1H680JLZCNG	CERAMIC CERAMIC	68P J	50V 50V
C5803	CC1H680JLZCNG	CERAMIC	68P J	50V		C6207	CEXLB1H100VDJ	ELECT	10U M	50V
C5804	CC1H680JLZCNG	CERAMIC	68P J	50V		C6208	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5806	CC1H270JLZCNG	CERAMIC	27P J	50V		C6209	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5807	CC1H270JLZCNG	CERAMIC	27P J	50V		C6210	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5808	CC1H270JLZCNG	CERAMIC	27P J	50V		C6212	CEXLB1H100VDJ	ELECT	10U M	50V
C5810	CC1H5R0CLZCNG	CERAMIC	5P C	50V		C6270	CEXLB1H100VEJ	ELECT	10U M	50V
C5811	CC1H5R0CLZCNG	CERAMIC	5P C	50V			CE1H100MZVALC	ELECT	10U M	50V
C5812	CC1H5R0CLZCNG	CERAMIC	5P C	50V		C6271	CEXLB1H100VDJ	ELECT	10U M	50V
C5814	CC1H120JLZCNG	CERAMIC	12P J	50V		C6272	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5815	CC1H120JLZCNG	CERAMIC	12P J	50V		C6273	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5816	CC1H120JLZCNG	CERAMIC	12P J	50V		C6274	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5818	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C6275	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5819	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C6276	CEXLB1H100VDJ	ELECT	10U M	50V
C5820	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C6277	CEXLB1H100VDJ	ELECT	10U M	50V
C5821	CK1H104KLZBNG	CERAMIC	0.1U K	50V		C6278	CK1A105KLZBNG	CERAMIC	1U K	10V
C5822	CEXLB1H100VDJ	ELECT	10U M	50V		C6279	CK1A105KLZBNG	CERAMIC	1U K	10V
C5823	CEXLB1H100VDJ	ELECT	10U M	50V		C6354	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C5902	CK1A105KLZBNG	CERAMIC	1U K	10V		C6361	CK0J106KGMBNG	CERAMIC	10U Z	6.3V
C5904	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C6362	CK1H104ZLZFNG	CERAMIC	0.1U Z 10U M	50V
C5905	CEXLB1H100VEJ CE1H100MZVALC	ELECT ELECT	10U M 10U M	50V 50V		C6363 C6364	CEXLB1H100VDJ CEXLB1C101VDJ	ELECT ELECT	100 M	50V 16V
C6052	CK1A105KLZBNG	CERAMIC	100 M	10V		C6365	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6052	CK1A105KLZBNG	CERAMIC	10 K	10V		C6409	CE0J222MZVALC	ELECT	2200U M	6.3V
C6054	CE0J221MZVALC	ELECT	220U M	6.3V		00403	CEXLB0J222VEJ	ELECT	2200U M	6.3V
00001	CEXLB0J221VEJ	ELECT	220U M	6.3V		C6410	CE0J222MZVALC	ELECT	2200U M	6.3V
C6055	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		00110	CEXLB0J222VEJ	ELECT	2200U M	6.3V
C6060	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C6501	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6061	CK1A105KLZBNG	CERAMIC	1U K	10V		C6502	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6065	CK1A105KLZBNG	CERAMIC	1U K	10V		C6503	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6066	CE0J221MZVALC	ELECT	220U M	6.3V		C6504	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
	CEXLB0J221VEJ	ELECT	220U M	6.3V		C6505	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6072	CK1A105KLZBNG	CERAMIC	1U K	10V		C6509	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6073	CK1A105KLZBNG	CERAMIC	1U K	10V		C6510	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6074	CE0J221MZVALC	ELECT	220U M	6.3V		C6511	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
	CEXLB0J221VEJ	ELECT	220U M	6.3V		C6512	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6075	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C6513	CK1H102KLZBNG	CERAMIC	1000P K	50V
C6101	CK1H102KLZBNG	CERAMIC	1000P K	50V		C6514	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6102	CK1H102KLZBNG	CERAMIC	1000P K	50V		C6515	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6106	CC1H220JLZCNG	CERAMIC	22P J	50V		C6516	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V
C6107	CC1H22OJLZCNG	CERAMIC	22P J	50V		C6517	CEXLB1V470VDJ	ELECT	47U M	35V
C6110	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V		C6518	CEXLB1V470VDJ	ELECT	47U M	35V

Schematic Location	Part No.	Desc	ription		Schematic Location	Part No.	Description
C6519	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	IC5700	QXXAVC967—-P	IC HYB18T512161B2F-25
C6520	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	IC5750	QXXAAJQ0880—	IC NAND128W3A2BN6E N4VJ
C6521	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	IC5750A	QXXAVC973—-M	IC NAND128W3A
C6522	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	IC5900	QM51957BFP-P	IC M51957BFP
C6523	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	IC6051	QPQ070XNA1ZPP	IC PQ070XNA1ZPH
C6524	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	IC6060	QXXAVC976P	IC PQ018EN02ZPH
C6525	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	IC6071	QPQ070XNA1ZPP	IC PQ070XNA1ZPH
C6526	CK1H104ZLZFNG	CERAMIC	0.1U Z	50V	IC6200	QNJM4558MP	IC NJM4558M-TE2
					IC6270	QXXAVC944P	IC WM8781GEDS/R
					IC6504	QXXAVC972—-M	IC SII9185A
	DIODES						
D801	DD1SS352G	DIODE 1SS35					
	DD1SS355G	DIODE 1SS35				COILS	
D803	DZUDZS3.9B—G	ZD UDZS-TE-1			L001	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
D804	DZUDZS6.2B—G	ZD UDZS-TE-1			L002	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
D1611	DDD1FM3——-G	DIODE D1FM3			L003	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
D1612	DDD1FM3——-G	DIODE D1FM3			L004	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
D1613	DDD1FH3——-G	DIODE D1FH3			L005	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
D1620	DZUDZS3.0B—G	ZD UDZS3.0B-			L006	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
D1621	DD1SS352G	DIODE 1SS35			L801	1AV4L2FB3R3MG	"INDUCTOR,3.3U M"
	DD1SS355G	DIODE 1SS35			L802	1AV4L2FB3R3MG	"INDUCTOR,3.3U M"
D1641	DDD1FM3——-G	DIODE D1FM3			L803	1LB4L26B0740G	"INDUCTOR ,220 OHM"
D1663	DD1SS352G	DIODE 1SS35	` ,		L804	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
	DD1SS355G	DIODE 1SS35			L805	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
D1671	DD1SS352G	DIODE 1SS35	` ,		L1000	1AV4L2FB3R3MG	"INDUCTOR,3.3U M"
	DD1SS355G	DIODE 1SS35			L1202	1AV4L2FB3R3MG	"INDUCTOR,3.3U M"
D1677	DD1SS352G	DIODE 1SS35			L1601	1LB4L26B0740G	"INDUCTOR ,220 OHM"
	DD1SS355G	DIODE 1SS35			L1602	1LB4L26B0740G	"INDUCTOR ,220 OHM"
D1681	DDD1FM3——-G	DIODE D1FM3			L1603	1LB4L26B0740G	"INDUCTOR ,220 OHM"
D1683	DD1SS352G	DIODE 1SS35			L1604	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
	DD1SS355G	DIODE 1SS35			L1605	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
D1902	DLSLR343MC3FN	LED SLR-343			L1608	1LB4L26B0740G	"INDUCTOR ,220 OHM"
D3216	DDRB551V-30-G	DIODE RB551			L1609	1LB4L26B0740G	"INDUCTOR ,220 OHM"
D6051	DZUDZS3.0B—G	ZD UDZS3.0B-			L1612	1LB4L26B0740G	"INDUCTOR ,220 OHM"
D6052	DD1SS352G	DIODE 1SS35	` ,		L1613	1LB4L26B0740G	"INDUCTOR ,220 OHM"
	DD1SS355G	DIODE 1SS35	5-TE-17		L1614	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
					L1615	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
	INTEGRATEI	n CIDCI IIT	c		L1616	1AV4L26B5930N	"INDUCTOR,10U"
10001	QLA42205-E—N	IC LA42205-E			L1617	1LB4L26B1000N	"INDUCTOR,15UH"
IC001 IC800						1AV4L2WK150MN	"INDUCTOR,15U M"
IC800	QXXAVC980—-M QXXAVC844—-P	IC LC875932A IC CAT24C04V			L1618	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
10001					L1619	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
	QLE24C042M-EP	IC LE24C042N IC AT24C04N-			L1620	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
10000	QXXAVC820—-P				L1621	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
IC802	QTC7SET08FU-P	IC TC7SET08F			L1622	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
IC803	QTC7SH08FU—P	IC TC7SH08FU	,		L1623	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
IC1251	QCD4052BNSR-P	IC CD4052BNS			L1624	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
101600	QTC4052BF—-P	IC TC4052BF-			L1625	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
IC1600	QBD9842FV—-P	IC I 05774MD			L1626	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
IC1610 IC1650	QLA5774MPE—P QMP2106DK—-P	IC LA5774MP- IC MP2106DK			L1627	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
IC1650 IC1670	QXXAVC692—-P	IC NIP2106DK			L1628	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
IC1670 IC1681	QLA5774MPE—P	IC PUTLAX951			L1632	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
IC1681	QPST600DMT—P	IC LAST 74 MIP			L1641	1AV4L2WK560MN	"INDUCTOR,56U M"
IC3200	QNJW1142CV—P	IC PS 1600DM			14040	1LB4L26B1030N	"INDUCTOR,56UH"
IC5500	QXXAVC969—-M	IC 215-06840			L1642	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
100000	ανν⊔∧ΩΩΩΩ <u>Ω</u> -ΙΔΙ	10 210-000400	J1 -00		L1643	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W

Schematic Location	Part No.	Description		Schematic .ocation	Part No.	Description
L1651	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W	_	L1739	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1652	1LB4L26B1000N	"INDUCTOR,15UH"		L1740	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
	1AV4L2WK150MN	"INDUCTOR,15U M"		L1741	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1653	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L1742	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1663	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L1743	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1672	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L1744	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1681	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L1745	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1682	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L1746	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1684	1AV4L2WK560MN	"INDUCTOR,56U M"		L1747	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
	1LB4L26B1030N	"INDUCTOR,56UH"		L1748	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1690	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L1749	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1691	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L1750	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1692	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L1902	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1693	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5502	1AV4L2FB150MG	"INDUCTOR,15U M"
L1694	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5521	1LB4L26B0740G	"INDUCTOR ,220 OHM"
L1695	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5522	1LB4L26B0740G	"INDUCTOR ,220 OHM"
L1697	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5531	1LB4L26B0740G	"INDUCTOR ,220 OHM"
L1698	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5532	1LB4L26B0740G	"INDUCTOR ,220 OHM"
L1701	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5533	1LB4L26B0740G	"INDUCTOR ,220 OHM"
L1702	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5534	1LB4L26B0740G	"INDUCTOR ,220 OHM"
L1703	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5535	1LB4L26B0740G	"INDUCTOR ,220 OHM"
L1704	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5536	1LB4L26B0740G	"INDUCTOR ,220 OHM"
L1705	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5537	1LB4L26B0740G	"INDUCTOR ,220 OHM"
L1706	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5538	1LB4L26B0740G	"INDUCTOR ,220 OHM"
L1707	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5539	1LB4L26B0740G	"INDUCTOR ,220 OHM"
L1708	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5541	1LB4L26B0740G	"INDUCTOR ,220 OHM"
L1709	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5542	1LB4L26B0740G	"INDUCTOR ,220 OHM"
L1710	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5543	1LB4L26B0740G	"INDUCTOR ,220 OHM"
L1711	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5544	1LB4L26B0740G	"INDUCTOR ,220 OHM"
L1712	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5545	1LB4L26B0740G	"INDUCTOR ,220 OHM"
L1713	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5546	1LB4L26B0740G	"INDUCTOR ,220 OHM"
L1714	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5547	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
L1715	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5548	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
L1716	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5549	1LB4L26B0740G	"INDUCTOR ,220 OHM"
L1717	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5551	1LB4L26B0740G	"INDUCTOR ,220 OHM"
L1718	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5552	1AV4L2GAR47JG	"INDUCTOR,0.47U J"
L1719	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5554	1AV4L2GAR47JG	"INDUCTOR,0.47U J"
L1720	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5556	1AV4L2GAR47JG	"INDUCTOR,0.47U J"
L1721	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5558	1AV4L2GAR47JG	"INDUCTOR, 0.47U J"
L1722	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5561	1LB4L26B0740G	"INDUCTOR ,220 OHM"
L1723	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5562	1LB4L26B0740G	"INDUCTOR ,220 OHM"
L1724	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W MT-GLAZE 0.000 ZA 1/10W		L5579	1AV4L2GAR47JG	"INDUCTOR,0.47U J"
L1725	RGFR000ZTAANL			L5582	1AV4L2GAR47JG	"INDUCTOR, 0.47U J"
L1726	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W MT-GLAZE 0.000 ZA 1/10W		L5591	1LB4L26B0700G	"INDUCTOR, 120 OHM"
L1727	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5592	1LB4L26B0700G	"INDUCTOR, 120 OHM"
L1728 L1729	RGFR000ZTAANL RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5593 L5594	1LB4L26B0700G 1LB4L26B0700G	"INDUCTOR ,120 OHM" "INDUCTOR ,120 OHM"
L1729 L1730		MT-GLAZE 0.000 ZA 1/10W				
L1730 L1731	RGFR000ZTAANL RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5595 L5596	1LB4L26B0700G 1LB4L26B0700G	"INDUCTOR ,120 OHM" "INDUCTOR ,120 OHM"
L1731 L1732	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5596 L5597	1LB4L26B0700G	"INDUCTOR ,120 OHM"
L1732 L1733	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5597 L5701	1LB4L26B0740G	"INDUCTOR ,120 OHM"
L1733 L1734	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5701 L5751	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L1734 L1735	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5751 L5761	1LB4L26B0700G	"INDUCTOR ,120 OHM"
L1735 L1736	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5761 L5762	1LB4L26B0700G	"INDUCTOR ,120 OHM"
L1736 L1737	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5762 L5802	1AV4L2GA150JG	"INDUCTOR,15U J"
L1737 L1738	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L5802 L5803	1AV4L2GA150JG	"INDUCTOR,15U J"
L1700	HOLHOULIAANL	WII GEALE 0.000 LA 1/1000		LUUUU	INVTLZUNIJUUU	1140001011,1000

Schematic Location	Part No.	Description		Schematic Location	Part No.	Description
L5804	1AV4L2GA150JG	"INDUCTOR,15U J"	•	L6515	1LB4L26B0740G	"INDUCTOR ,220 OHM"
L5805	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6516	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6051	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L6518	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6052	1LB4L26B0740G	"INDUCTOR ,220 OHM"		L7008	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6060	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L7010	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6064	1LB4L26B0740G	"INDUCTOR ,220 OHM"		L7011	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6071	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L7012	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6072	1LB4L26B0740G	"INDUCTOR ,220 OHM"		L7013	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6095	1AV4L2GAR47JG	"INDUCTOR,0.47U J"		L7014	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6097	1AV4L2GAR47JG	"INDUCTOR,0.47U J"		L7015	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6102	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L7016	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6103	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L7017	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6104	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L7022	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6105	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L7023	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6106	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L7025	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6107	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L7026	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6108	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L7027	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6109	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L7028	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6110	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L7029	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6111	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		L7030	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W
L6112	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W				
L6113	1LB4L26B0700G	"INDUCTOR ,120 OHM"			TDANICICTO	DC.
L6114	1LB4L26B0700G	"INDUCTOR ,120 OHM"		0000	TRANSISTO	
L6116	1AV4L2FB3R3MG	"INDUCTOR,3.3U M"		Q802	TISA1235AC1FP	TR ISA1235AC1F
L6118	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SA1037AK-RP	TR 2SA1037AK-T146-R
L6119	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SA1037AK-SP	TR 2SA1037AK-S-T146
L6120	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SA1235A1E-P	TR 2SA1235A1E
L6121	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SA1235A1F-P	TR 2SA1235A1F
L6122	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			TISA1235AC1EP TXXLBB005—-P	TR ISA1235AC1E TR MMBTSA1235F
L6123	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		Q805	TXXLBB005—-P	TR MMBTSC3928R
L6124	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		QOUS	T2SC2412K-R-P	TR 2SC2412K T146 R
L6125	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SC2412K-N-P	TR 2SC2412K T146 S
L6126	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SC2812-L6-P	TR 2SC2812-L6-TB
L6127	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SC2812-L7-P	TR 2SC2812-L7-TB
L6128	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SC2812N-L6P	TR 2SC2812N-L6-TB0
L6129	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SC3928A1R-P	TR 2SC3928A1R
L6201	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SC3928A1S-P	TR 2SC3928A1S
L6270 L6271	RGFR000ZTAANL RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W MT-GLAZE 0.000 ZA 1/10W		Q808	TISA1235AC1FP	TR ISA1235AC1F
L6271	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		4000	T2SA1037AK-RP	TR 2SA1037AK-T146-R
L6311	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SA1037AK-SP	TR 2SA1037AK-S-T146
L6312	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SA1235A1E-P	TR 2SA1235A1E
L6354	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SA1235A1F-P	TR 2SA1235A1F
L6355	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			TISA1235AC1EP	TR ISA1235AC1E
L6357	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			TXXLBB005—-P	TR MMBTSA1235F
L6358	1AV4L3CY201MG	"IMPEDANCE,200 OHM M"		Q809	TXXLBB006—-P	TR MMBTSC3928R
L6359	1AV4L3CY201MG	"IMPEDANCE,200 OHM M"			T2SC2412K-R-P	TR 2SC2412K T146 R
L6360	1AV4L3CY201MG	"IMPEDANCE,200 OHM M"			T2SC2412K-S-P	TR 2SC2412K T146 S
L6501	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SC2812-L6-P	TR 2SC2812-L6-TB
L6505	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SC2812-L7-P	TR 2SC2812-L7-TB
L6509	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SC2812N-L6P	TR 2SC2812N-L6-TB0
L6510	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SC3928A1R-P	TR 2SC3928A1R
L6511	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W			T2SC3928A1S-P	TR 2SC3928A1S
L6512	RGFR000ZTAANL	MT-GLAZE 0.000 ZA 1/10W		Q810	TXXLBB006—-P	TR MMBTSC3928R
L6513	1LB4L26B0740G	"INDUCTOR ,220 OHM"			T2SC2412K-R-P	TR 2SC2412K T146 R
L6514	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W			T2SC2412K-S-P	TR 2SC2412K T146 S

Schematic	Part No.	Description	Schematic	Part No.	Description
Location	1 4.01.00	Description	Location	1	Description
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0		T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1R-P	TR 2SC3928A1R		T2SC3928A1S-P	TR 2SC3928A1S
	T2SC3928A1S-P	TR 2SC3928A1S	Q1252	TXXLBB006—-P	TR MMBTSC3928R
Q811	TISA1235AC1FP	TR ISA1235AC1F		T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SA1037AK-RP	TR 2SA1037AK-T146-R		T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SA1037AK-SP	TR 2SA1037AK-S-T146		T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SA1235A1E-P	TR 2SA1235A1E		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SA1235A1F-P	TR 2SA1235A1F		T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	TISA1235AC1EP	TR ISA1235AC1E		T2SC3928A1R-P	TR 2SC3928A1R
	TXXLBB005—-P	TR MMBTSA1235F		T2SC3928A1S-P	TR 2SC3928A1S
Q813	TXXLBB006—-P	TR MMBTSC3928R	Q1261	TXXLBB006—-P	TR MMBTSC3928R
	T2SC2412K-R-P	TR 2SC2412K T146 R		T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2412K-S-P	TR 2SC2412K T146 S		T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0		T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R		T2SC3928A1R-P	TR 2SC3928A1R
0014	T2SC3928A1S-P TXXLBB006—-P	TR 2SC3928A1S	01000	T2SC3928A1S-P	TR 2SC3928A1S
Q814	T2SC2412K-R-P	TR MMBTSC3928R TR 2SC2412K T146 R	Q1262	TXXLBB006—-P T2SC2412K-R-P	TR MMBTSC3928R TR 2SC2412K T146 R
	T2SC2412K-R-P T2SC2412K-S-P	TR 2SC2412K T146 K		T2SC2412K-R-P	TR 2SC2412K T146 K
	T2SC2412K-S-P	TR 2SC2812-L6-TB		T2SC2412K-S-F	TR 2SC2812-L6-TB
	T2SC2812-L0-P	TR 2SC2812-L7-TB		T2SC2812-L0-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0		T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R		T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S		T2SC3928A1S-P	TR 2SC3928A1S
Q815	TXXLBB006—-P	TR MMBTSC3928R	Q1609	T2SJ615-EP	TR 2SJ615-TD-E
40.0	T2SC2412K-R-P	TR 2SC2412K T146 R	Q1610	TFSS163-EP	TR FSS163-TL-E
	T2SC2412K-S-P	TR 2SC2412K T146 S	Q1611	TXXLBB006—-P	TR MMBTSC3928R
	T2SC2812-L6-P	TR 2SC2812-L6-TB	۵.٠٠.	T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0		T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC3928A1R-P	TR 2SC3928A1R		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC3928A1S-P	TR 2SC3928A1S		T2SC2812N-L6P	TR 2SC2812N-L6-TB0
Q1006	TXXLBB006—-P	TR MMBTSC3928R		T2SC3928A1R-P	TR 2SC3928A1R
	T2SC2412K-R-P	TR 2SC2412K T146 R		T2SC3928A1S-P	TR 2SC3928A1S
	T2SC2412K-S-P	TR 2SC2412K T146 S	Q1612	TXXLBB006—-P	TR MMBTSC3928R
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0		T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC3928A1R-P	TR 2SC3928A1R		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC3928A1S-P	TR 2SC3928A1S		T2SC2812N-L6P	TR 2SC2812N-L6-TB0
Q1007	TXXLBB006—-P	TR MMBTSC3928R		T2SC3928A1R-P	TR 2SC3928A1R
	T2SC2412K-R-P	TR 2SC2412K T146 R		T2SC3928A1S-P	TR 2SC3928A1S
	T2SC2412K-S-P	TR 2SC2412K T146 S	Q1613	TXXLBB006—-P	TR MMBTSC3928R
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0		T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC3928A1R-P	TR 2SC3928A1R		T2SC2812-L7-P	TR 2SC2812-L7-TB
04054	T2SC3928A1S-P	TR 2SC3928A1S		T2SC2812N-L6P	TR 2SC2812N-L6-TB0
Q1251	TXXLBB006—-P	TR MMBTSC3928R		T2SC3928A1R-P	TR 2SC3928A1R
	T2SC2412K-R-P	TR 2SC2412K T146 R	04045	T2SC3928A1S-P	TR 2SC3928A1S
	T2SC2412K-S-P	TR 2SC2412K T146 S	Q1615	T15C02CH-E—P	TR 15C02CH-TL-E
	T2SC2812-L6-P	TR 2SC2812-L6-TB	Q1641	TXXLBB006—-P	TR MMBTSC3928R

Schematic Location	Part No.	Description	Schematic Location	Part No.	Description
Location	T2SC2412K-R-P	TR 2SC2412K T146 R		T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2412K-N-P	TR 2SC2412K T146 K		T2SC2412K-N-P	TR 2SC2412K T146 K
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0		T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R		T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S		T2SC3928A1S-P	TR 2SC3928A1S
Q1651	TXXLBB006—-P	TR MMBTSC3928R	Q5802	TISA1235AC1FP	TR ISA1235AC1F
Q1001	T2SC2412K-R-P	TR 2SC2412K T146 R	Q0002	T2SA1037AK-RP	TR 2SA1037AK-T146-R
	T2SC2412K-S-P	TR 2SC2412K T146 S		T2SA1037AK-SP	TR 2SA1037AK-S-T146
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SA1235A1E-P	TR 2SA1235A1E
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SA1235A1F-P	TR 2SA1235A1F
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0		TISA1235AC1EP	TR ISA1235AC1E
	T2SC3928A1R-P	TR 2SC3928A1R		TXXLBB005—-P	TR MMBTSA1235F
	T2SC3928A1S-P	TR 2SC3928A1S	Q5803	TISA1235AC1FP	TR ISA1235AC1F
Q1681	TXXLBB006—-P	TR MMBTSC3928R		T2SA1037AK-RP	TR 2SA1037AK-T146-R
	T2SC2412K-R-P	TR 2SC2412K T146 R		T2SA1037AK-SP	TR 2SA1037AK-S-T146
	T2SC2412K-S-P	TR 2SC2412K T146 S		T2SA1235A1E-P	TR 2SA1235A1E
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SA1235A1F-P	TR 2SA1235A1F
	T2SC2812-L7-P	TR 2SC2812-L7-TB		TISA1235AC1EP	TR ISA1235AC1E
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0		TXXLBB005—-P	TR MMBTSA1235F
	T2SC3928A1R-P	TR 2SC3928A1R	Q5804	TISA1235AC1FP	TR ISA1235AC1F
	T2SC3928A1S-P	TR 2SC3928A1S		T2SA1037AK-RP	TR 2SA1037AK-T146-R
Q1802	TXXLBB006—-P	TR MMBTSC3928R		T2SA1037AK-SP	TR 2SA1037AK-S-T146
	T2SC2412K-R-P	TR 2SC2412K T146 R		T2SA1235A1E-P	TR 2SA1235A1E
	T2SC2412K-S-P	TR 2SC2412K T146 S		T2SA1235A1F-P	TR 2SA1235A1F
	T2SC2812-L6-P	TR 2SC2812-L6-TB		TISA1235AC1EP	TR ISA1235AC1E
	T2SC2812-L7-P	TR 2SC2812-L7-TB	05000	TXXLBB005—-P	TR MMBTSA1235F
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0	Q5806	TXXLBB006—-P	TR MMBTSC3928R
	T2SC3928A1R-P	TR 2SC3928A1R TR 2SC3928A1S		T2SC2412K-R-P T2SC2412K-S-P	TR 2SC2412K T146 R TR 2SC2412K T146 S
Q1803	T2SC3928A1S-P TXXLBB006—-P	TR MMBTSC3928R		T2SC2812-L6-P	TR 2SC2812-L6-TB
Q1003	T2SC2412K-R-P	TR 2SC2412K T146 R		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2412K-N-P	TR 2SC2412K T146 K		T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SC3928A1R-P	TR 2SC3928A1R
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SC3928A1S-P	TR 2SC3928A1S
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0	Q5807	TXXLBB006—-P	TR MMBTSC3928R
	T2SC3928A1R-P	TR 2SC3928A1R	4000.	T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC3928A1S-P	TR 2SC3928A1S		T2SC2412K-S-P	TR 2SC2412K T146 S
Q5771	TXXLBB006—-P	TR MMBTSC3928R		T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2412K-R-P	TR 2SC2412K T146 R		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2412K-S-P	TR 2SC2412K T146 S		T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC2812-L6-P	TR 2SC2812-L6-TB		T2SC3928A1R-P	TR 2SC3928A1R
	T2SC2812-L7-P	TR 2SC2812-L7-TB		T2SC3928A1S-P	TR 2SC3928A1S
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0	Q5808	TXXLBB006—-P	TR MMBTSC3928R
	T2SC3928A1R-P	TR 2SC3928A1R		T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC3928A1S-P	TR 2SC3928A1S		T2SC2412K-S-P	TR 2SC2412K T146 S
Q5772	TISA1235AC1FP	TR ISA1235AC1F		T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SA1037AK-RP	TR 2SA1037AK-T146-R		T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SA1037AK-SP	TR 2SA1037AK-S-T146		T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SA1235A1E-P	TR 2SA1235A1E		T2SC3928A1R-P	TR 2SC3928A1R
	T2SA1235A1F-P	TR 2SA1235A1F	0500	T2SC3928A1S-P	TR 2SC3928A1S
	TISA1235AC1EP	TR ISA1235AC1E	Q5901	TXXLBB006—-P	TR MMBTSC3928R
05770	TXXLBB005—-P	TR MMBTSA1235F		T2SC2412K-R-P	TR 2SC2412K T146 R
Q5773	TXXLBB006—-P	TR MMBTSC3928R		T2SC2412K-S-P	TR 2SC2412K T146 S

Schematic Location	Part No.	Description	Schematic Location	Part No.	Des	cription
	T2SC2812-L6-P	TR 2SC2812-L6-TB		RESISTORS		
	T2SC2812-L7-P	TR 2SC2812-L7-TB	R001	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0	R002	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
	T2SC3928A1R-P	TR 2SC3928A1R	R003	RGF3901JTCANL	MT-GLAZE	3.9K JA 1/10W
	T2SC3928A1S-P	TR 2SC3928A1S	R004	RGF3901JTCANL	MT-GLAZE	3.9K JA 1/10W
Q5902	TXXLBB006—-P	TR MMBTSC3928R	R007	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
	T2SC2412K-R-P	TR 2SC2412K T146 R	R801	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
	T2SC2412K-S-P	TR 2SC2412K T146 S	R802	RGF4700JTCANL	MT-GLAZE	470 JA 1/10W
	T2SC2812-L6-P	TR 2SC2812-L6-TB	R803	RGF2202JTCANL	MT-GLAZE	22K JA 1/10W
	T2SC2812-L7-P	TR 2SC2812-L7-TB	R804	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0	R806	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
	T2SC3928A1R-P	TR 2SC3928A1R	R808	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
	T2SC3928A1S-P	TR 2SC3928A1S	R809	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
Q6333	TISA1235AC1FP	TR ISA1235AC1F	R810	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
	T2SA1037AK-RP	TR 2SA1037AK-T146-R	R813	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
	T2SA1037AK-SP	TR 2SA1037AK-S-T146	R814	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
	T2SA1235A1E-P	TR 2SA1235A1E	R815	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
	T2SA1235A1F-P	TR 2SA1235A1F	R817	RGF1004JTCANL	MT-GLAZE	1M JA 1/10W
	TISA1235AC1EP	TR ISA1235AC1E	R818	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
06051	TXXLBB005—-P	TR MMBTSA1235F	R820	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
Q6351	TXXLBB006—-P	TR MMBTSC3928R	R824	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
	T2SC2412K-R-P	TR 2SC2412K T146 R TR 2SC2412K T146 S	R826	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
	T2SC2412K-S-P T2SC2812-L6-P	TR 2SC2812-L6-TB	R828	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
	T2SC2812-L0-P	TR 2SC2812-L7-TB	R829	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0	R830	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
	T2SC3928A1R-P	TR 2SC3928A1R	R831	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
	T2SC3928A1S-P	TR 2SC3928A1S	R832 R833	RGF1000JTCANL	MT-GLAZE MT-GLAZE	100 JA 1/10W
Q6352	T2SC2411K-Q-P	TR 2SC2411K-T146-Q	R834	RGF4701JTCANL RGF1000JTCANL	MT-GLAZE	4.7K JA 1/10W 100 JA 1/10W
Q6361	TXXLBB006—-P	TR MMBTSC3928R	R835	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
40001	T2SC2412K-R-P	TR 2SC2412K T146 R	R836	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
	T2SC2412K-S-P	TR 2SC2412K T146 S	R838	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
	T2SC2812-L6-P	TR 2SC2812-L6-TB	R840	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
	T2SC2812-L7-P	TR 2SC2812-L7-TB	R841	RGF1003JTCANL	MT-GLAZE	100K JA 1/10W
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0	R842	RGF1003JTCANL	MT-GLAZE	100K JA 1/10W
	T2SC3928A1R-P	TR 2SC3928A1R	R843	RGF1003JTCANL	MT-GLAZE	100K JA 1/10W
	T2SC3928A1S-P	TR 2SC3928A1S	R845	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
Q6362	TXXLBB006—-P	TR MMBTSC3928R	R846	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
	T2SC2412K-R-P	TR 2SC2412K T146 R	R847	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
	T2SC2412K-S-P	TR 2SC2412K T146 S	R848	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
	T2SC2812-L6-P	TR 2SC2812-L6-TB	R853	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
	T2SC2812-L7-P	TR 2SC2812-L7-TB	R854	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0	R855	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
	T2SC3928A1R-P	TR 2SC3928A1R	R856	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
	T2SC3928A1S-P	TR 2SC3928A1S	R857	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
Q6363	TMCH6306——P	TR MCH6306-TL	R860	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
Q6501	TXXLBB006—-P	TR MMBTSC3928R	R866	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
	T2SC2412K-R-P	TR 2SC2412K T146 R	R867	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
	T2SC2412K-S-P	TR 2SC2412K T146 S	R869	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
	T2SC2812-L6-P	TR 2SC2812-L6-TB	R870	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
	T2SC2812-L7-P	TR 2SC2812-L7-TB	R871	RGF1003JTCANL	MT-GLAZE	100K JA 1/10W
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0	R873	RGF3303JTCANL	MT-GLAZE	330K JA 1/10W
	T2SC3928A1R-P	TR 2SC3928A1R	R875	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
	T2SC3928A1S-P	TR 2SC3928A1S	R876	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
			R879	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
			R880	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W

Schematic Location	Part No.	Des	cription	Schematic Location	Part No.	Des	cription
R881	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R1058	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W
R882	RGF2200JTCANL	MT-GLAZE	220 JA 1/10W	R1059	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R883	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R1060	RGF3303JTCANL	MT-GLAZE	330K JA 1/10W
R884	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R1061	RGF1503JTCANL	MT-GLAZE	150K JA 1/10W
R886	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R1062	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W
R887	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R1063	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R888	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W	R1064	RGF3303JTCANL	MT-GLAZE	330K JA 1/10W
R889	RGF2202JTCANL	MT-GLAZE	22K JA 1/10W	R1065	RGF1503JTCANL	MT-GLAZE	150K JA 1/10W
R891	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W	R1066	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W
R892	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R1067	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R893	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R1068	RGF3303JTCANL	MT-GLAZE	330K JA 1/10W
R894	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	R1069	RGF1503JTCANL	MT-GLAZE	150K JA 1/10W
R896	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R1070	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W
R900	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R1071	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R901	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R1072	RGF3303JTCANL	MT-GLAZE	330K JA 1/10W
R902	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R1073	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W
R903	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R1074	RGF82R0JTCANL	MT-GLAZE	82 JA 1/10W
R904	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R1075	RGF82R0JTCANL	MT-GLAZE	82 JA 1/10W
R905	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R1254	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R906	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R1255	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R907	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R1256	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R908	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R1257	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R909	1LB4L26B0700G	"INDUCTOR	"120 OHM	R1262	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R910	1LB4L26B0700G	"INDUCTOR	"120 OHM	R1263	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R911	1LB4L26B0700G	"INDUCTOR	"120 OHM	R1266	RGF2201JTCANL	MT-GLAZE	2.2K JA 1/10W
R912	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R1267	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R913	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R1269	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R914	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	R1271	RGF2201JTCANL	MT-GLAZE	2.2K JA 1/10W
R917	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R1601	1LB4L26B0700G	"INDUCTOR	,"120 OHM
R918	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R1611	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1000	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	R1612	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1002	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	R1613	RGF2202JTCANL	MT-GLAZE	22K JA 1/10W
R1004	RGF2200JTCANL	MT-GLAZE	220 JA 1/10W	R1614	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W
R1005	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	R1615	RGF2202JTCANL	MT-GLAZE	22K JA 1/10W
R1007	RGF1503JTCANL	MT-GLAZE	150K JA 1/10W	R1616	RGF6802JTCANL	MT-GLAZE	68K JA 1/10W
R1008	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W	R1617	RGF2201JTCANL	MT-GLAZE	2.2K JA 1/10W
R1009	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R1618	RGF6801JTCANL	MT-GLAZE	6.8K JA 1/10W
R1010	RGF3303JTCANL	MT-GLAZE	330K JA 1/10W	R1619	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W
R1011	RGF1503JTCANL	MT-GLAZE	150K JA 1/10W	R1620	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W
R1012	RGF2203JTCANL	MT-GLAZE	220K JA 1/10W	R1621	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W
R1013	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R1622	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W
R1014	RGF3303JTCANL	MT-GLAZE	330K JA 1/10W	R1623	RN1R005JTFANL	MT-FILM	0.005 JA 1W
R1019	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	R1624	RN1R005JTFANL	MT-FILM	0.005 JA 1W
R1021	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	R1625	RGF1002FTCANL	MT-GLAZE	10K FA 1/10W
R1025	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	R1626	RGF8200FTCANL	MT-GLAZE	820 FA 1/10W
R1031	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	R1627	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1037	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	R1628	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1043	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	R1629	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1049	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	R1630	RGF4701FTCANL	MT-GLAZE	4.7K FA 1/10W
R1051	RGF4700JTCANL	MT-GLAZE	470 JA 1/10W	R1631	RGF7500FTCANL	MT-GLAZE	750 FA 10-Jan
R1052	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R1632	RGF1201FTCANL	MT-GLAZE	1.2K FA 10-Jan
R1053	RGF1003JTCANL	MT-GLAZE	100K JA 1/10W	R1633	RGF1002FTCANL	MT-GLAZE	10K FA 1/10W
R1054	RGF4700JTCANL	MT-GLAZE	470 JA 1/10W	R1634	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1055	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R1635	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W
R1056	RGF1003JTCANL	MT-GLAZE	100K JA 1/10W	R1636	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R1057	RGF1503JTCANL	MT-GLAZE	150K JA 1/10W	R1637	RG122R0JTEANL	MT-GLAZE	22 JA 1W
		00.120				02/122	0/1

Schematic Location	Part No.	Dese	cription		Schematic Location	Part No.	De	scription
R1638	RG122R0JTEANL	MT-GLAZE	22 JA	1W	R3205	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1639	RG122R0JTEANL	MT-GLAZE	22 JA	1W	R5501	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1640	RG147R0JTEANL	MT-GLAZE	47 JA	1W	R5504	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1641	RGF1002JTCANL	MT-GLAZE	10K JA	1/10W	R5506	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1642	RG147R0JTEANL	MT-GLAZE	47 JA	1W	R5507	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1643	RGF1001FTCANL	MT-GLAZE	1K FA		R5508	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1644	RGF47R0JTCANL	MT-GLAZE	47 JA		R5509	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1645	RGF1001FTCANL	MT-GLAZE	1K FA		R5510	RGF1004JTCANL	MT-GLAZE	1M JA 1/10W
R1646	RGFR000ZTCANL	MT-GLAZE	0.000 ZA		R5511	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1653	RGF1002JTCANL	MT-GLAZE	10K JA		R5516	RGF3300JTCANL	MT-GLAZE	330 JA 1/10W
R1654	RGF1003JTCANL	MT-GLAZE	100K JA		R5521	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W
R1655	RGF1002FTCANL	MT-GLAZE	10K FA		R5523 R5524	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1660 R1665	RGF9101JTCANL RGFR000ZTCANL	MT-GLAZE MT-GLAZE	9.1K JA 0.000 ZA		R5526	RGF1002JTCANL RGF1002JTCANL	MT-GLAZE MT-GLAZE	10K JA 1/10W 10K JA 1/10W
R1666	RGF4702FTCANL	MT-GLAZE	47K FA		R5529	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1671	RGF1002JTCANL	MT-GLAZE	10K JA		R5535	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1672	RGF6801FTCANL	MT-GLAZE	6.8K FA		R5538	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R1673	RGF5602FTCANL	MT-GLAZE	56K FA		R5539	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1674	RGF1002FTCANL	MT-GLAZE	10K FA		R5541	RGF3001FTCANL	MT-GLAZE	3K FA 1/10W
R1675	RGFR000ZTCANL	MT-GLAZE	0.000 ZA		R5542	RGF10R0FTCANL	MT-GLAZE	10 FA 1/10W
R1681	RGF47R0JTCANL	MT-GLAZE		1/10W	R5543	RGF1001FTCANL	MT-GLAZE	1K FA 1/10W
R1682	RGF3900FTCANL	MT-GLAZE	390 FA		R5544	RGF1001FTCANL	MT-GLAZE	1K FA 1/10W
R1683	RGF8201FTCANL	MT-GLAZE	8.2K FA	1/10W	R5545	RGF1001FTCANL	MT-GLAZE	1K FA 1/10W
R1684	RGF1001FTCANL	MT-GLAZE	1K FA	1/10W	R5546	RGF1001FTCANL	MT-GLAZE	1K FA 1/10W
R1685	RGF1002JTCANL	MT-GLAZE	10K JA	1/10W	R5547	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R1687	RWXLB71R2KXAL	WIRE WOUNI	1.2 KA	7W	R5548	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R1691	RGF2702JTCANL	MT-GLAZE	27K JA		R5549	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R1692	RGF1002JTCANL	MT-GLAZE	10K JA		R5552	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1694	RGFR000ZTCANL	MT-GLAZE	0.000 ZA		R5553	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1695	RGFR000ZTCANL	MT-GLAZE	0.000 ZA		R5554	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1806	RGF1001JTCANL	MT-GLAZE	1K JA	1/10W	R5555	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1808	1LB4L26B0700G	"INDUCTOR,			R5556	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1809	1LB4L26B0700G	"INDUCTOR,			R5557	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1811	1LB4L26B0700G	"INDUCTOR,		1/101/1	R5558	RGFR000ZTCANL	MT-GLAZE MT-GLAZE	0.000 ZA 1/10W
R1815 R1817	RGFR000ZTCANL RGF1002JTCANL	MT-GLAZE MT-GLAZE	10K JA		R5566 R5567	RGFR000ZTCANL RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W 0.000 ZA 1/10W
R1818	RGF2201JTCANL	MT-GLAZE	2.2K JA		R5568	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W
R1820	RGF4701JTCANL	MT-GLAZE	4.7K JA		R5569	RGF10R0JTCANL	MT-GLAZE	10 JA 1/10W
R1821	RGF1002JTCANL	MT-GLAZE	10K JA		R5580	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1822	RGFR000ZTCANL	MT-GLAZE	0.000 ZA		R5581	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1829	RGF4701JTCANL	MT-GLAZE	4.7K JA		R5582	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1830	RGF4701JTCANL	MT-GLAZE	4.7K JA		R5583	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1901	RGF1001JTCANL	MT-GLAZE	1K JA		R5584	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1902	RGF1001JTCANL	MT-GLAZE	1K JA		R5587	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1903	RGF1002JTCANL	MT-GLAZE	10K JA	1/10W	R5588	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1904	RGF1801JTCANL	MT-GLAZE	1.8K JA	1/10W	R5589	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1905	RGF2201JTCANL	MT-GLAZE	2.2K JA	1/10W	R5590	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1906	RGF3901JTCANL	MT-GLAZE	3.9K JA		R5591	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1907	RGF5601JTCANL	MT-GLAZE	5.6K JA		R5592	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1909	RGF2200JTCANL	MT-GLAZE	220 JA		R5593	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R1910	RGF2200JTCANL	MT-GLAZE	220 JA		R5596	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W
R1911	RGF1001JTCANL	MT-GLAZE	1K JA		R5597	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W
R1912	RGFR000ZTCANL	MT-GLAZE	0.000 ZA		R5598	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W
R3200	RGF1000JTCANL	MT-GLAZE	100 JA		R5599	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W
R3201	RGF1000JTCANL	MT-GLAZE	100 JA		R5601	RGF1801JTCANL	MT-GLAZE	1.8K JA 1/10W
R3204	RGFR000ZTCANL	MT-GLAZE	0.000 ZA	I/IUW	R5602	RGF1201JTCANL	MT-GLAZE	1.2K JA 1/10W

Schematic Location	Part No.	Des	cription	Schematic Location	Part No.	Des	scription
R5606	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R5902	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R5608	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R5903	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W
R5609	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R5904	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W
R5611	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R5905	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5612	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R5906	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R5613	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R5907	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R5617	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	R5908	RGF2202JTCANL	MT-GLAZE	22K JA 1/10W
R5631	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R5952	RGF22R0JTCANL	MT-GLAZE	22 JA 1/10W
R5632	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R5971	RGF4R70JTCANL	MT-GLAZE	4.7 JA 1/10W
R5646	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W	R5972	RGF4R70JTCANL	MT-GLAZE	4.7 JA 1/10W
R5647	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W	R5973	RGF1502JTCANL	MT-GLAZE	15K JA 1/10W
R5648	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W	R5974	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W
R5649	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W	R5975	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W
R5650	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W	R5976	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R5651	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W	R5977	RGF1502JTCANL	MT-GLAZE	15K JA 1/10W
R5701	RGF1001FTCANL	MT-GLAZE	1K FA 1/10W	R5978	RGF1502JTCANL	MT-GLAZE	15K JA 1/10W
R5702	RGF1001FTCANL	MT-GLAZE	1K FA 1/10W	R5979	RGF1502JTCANL	MT-GLAZE	15K JA 1/10W
R5703	RGF56R0FTCANL	MT-GLAZE	56 FA 1/10W	R5982	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5704	RGF56R0FTCANL	MT-GLAZE	56 FA 1/10W	R6051	RGF5600FTCANL	MT-GLAZE	560 FA 1/10W
R5751	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R6052	RGF1501FTCANL	MT-GLAZE	1.5K FA 1/10W
R5772	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R6053	RGF1201FTCANL	MT-GLAZE	1.2K FA 10-Jan
R5773	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R6054	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5774	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R6060	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5775	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R6071	RGF1201FTCANL	MT-GLAZE	1.2K FA 10-Jan
R5776	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R6072	RGF1200FTCANL	MT-GLAZE	120 FA 1/10W
R5777	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R6073	RGF1201FTCANL	MT-GLAZE	1.2K FA 10-Jan
R5778	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6074	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5779	RGF1003JTCANL	MT-GLAZE	100K JA 1/10W	R6100	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5802	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W	R6101	RGF3900JTCANL	MT-GLAZE	390 JA 1/10W
R5803	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W	R6103	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5804	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W	R6104	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5806	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W	R6108	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5807	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W	R6110	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5808	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W	R6112	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5815	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W	R6125	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R5817	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W	R6126	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R5819	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W	R6201	RGF2201FTCANL	MT-GLAZE	2.2K FA 1/10W
R5822	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W	R6202	RGF3302FTCANL	MT-GLAZE	33K FA 1/10W
R5823	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W	R6203	RGF2201FTCANL	MT-GLAZE	2.2K FA 1/10W
R5824	RGF6800JTCANL	MT-GLAZE	680 JA 1/10W	R6204	RGF3302FTCANL	MT-GLAZE	33K FA 1/10W
R5826	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6205	RGF6802FTCANL	MT-GLAZE	68K FA 1/10W
R5827	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6206	RGF6802FTCANL	MT-GLAZE	68K FA 1/10W
R5828	RGF1001JTCANL	MT-GLAZE	1K JA 1/10W	R6210	RGF2201FTCANL	MT-GLAZE	2.2K FA 1/10W
R5833	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R6211	RGF3302FTCANL	MT-GLAZE	33K FA 1/10W
R5834	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R6212	RGF2201FTCANL	MT-GLAZE	2.2K FA 1/10W
R5835	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R6213	RGF3302FTCANL	MT-GLAZE	33K FA 1/10W
R5836	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R6214	RGF6802FTCANL	MT-GLAZE	68K FA 1/10W
R5837	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R6215	RGF6802FTCANL	MT-GLAZE	68K FA 1/10W
R5838	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R6217	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R5839	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W	R6218	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R5840	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R6221	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R5843	RGF1000JTCANL	MT-GLAZE	100 JA 1/10W	R6228	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W
R5846	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W	R6231	RGF22R0JTCANL	MT-GLAZE	22 JA 1/10W
R5847	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W	R6232	RGF22R0JTCANL	MT-GLAZE	22 JA 1/10W
R5848	RGF75R0JTCANL	MT-GLAZE	75 JA 1/10W	R6233	RGF22R0JTCANL	MT-GLAZE	22 JA 1/10W
R5901	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W	R6234	RGF22R0JTCANL	MT-GLAZE	22 JA 1/10W
		02.122		1.5201		02/122	0/. // 10 00

Schematic Location	Part No.	Des	scription		Schematic Location	Part No.	De	scription
R6264	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W	_	R6545	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R6273	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R6546	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6274	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R6547	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6276	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W		R6548	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6277	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W		R6549	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6278	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W		R6550	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6279	RGF3301JTCANL	MT-GLAZE	3.3K JA 1/10W		R6551	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6280	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W		R6552	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6281	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W		R6553	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6325	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R6554	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R6326	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W		R6555	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R6336	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R6556	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6338	RGF4700JTCANL	MT-GLAZE	470 JA 1/10W		R6557	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6339	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		R6558	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6350	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W		R6559	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6352	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W		R6560	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6353	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W		R6561	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6354	RGF1801JTCANL	MT-GLAZE	1.8K JA 1/10W		R6562	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6361	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W		R6563	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W
R6364	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W		R6564	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R6365	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W		R6565	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W
R6368	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W		R6566	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R6369	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W		R6567	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R6370	RGF1504JTCANL	MT-GLAZE	1.5M JA 1/10W		R6572	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R6379	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W		R6573	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W
R6381	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W					
R6383	RGF2201JTCANL	MT-GLAZE	2.2K JA 1/10W			SWITCHES		
R6385	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		SW1901	1AV4S10B5650J	"CWITCH DI	ISH 1P-1TX1"
R6389	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		3001901	1AV4S10B0900J	"SWITCH,PU	
R6391	RG11500JTEANL	MT-GLAZE	150 JA 1W			1LB4S10B0200J	•	ISH 1P-1TX1"
R6392	RG11500JTEANL	MT-GLAZE	150 JA 1W		SW1902	1AV4S10B5650J		ISH 1P-1TX1"
R6393	RG11500JTEANL	MT-GLAZE	150 JA 1W		OW 1302	1AV4S10B0900J	"SWITCH,PU	
R6403	RGF4701JTCANL	MT-GLAZE	4.7K JA 1/10W			1LB4S10B0200J		ISH 1P-1TX1"
R6501 R6503	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W 10K JA 1/10W		SW1903	1AV4S10B5650J		ISH 1P-1TX1"
	RGF1002JTCANL RGFR000ZTCANL	MT-GLAZE MT-GLAZE	0.000 ZA 1/10W		OW 1000	1AV4S10B0900J	"SWITCH,PU	
R6512 R6525	RGF1501FTCANL	MT-GLAZE	1.5K FA 1/10W			1LB4S10B0200J		ISH 1P-1TX1"
R6526	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		SW1904	1AV4S10B5650J		ISH 1P-1TX1"
R6527	RGF1501FTCANL	MT-GLAZE	1.5K FA 1/10W			1AV4S10B0900J	"SWITCH,PU	
R6528	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W			1LB4S10B0200J		ISH 1P-1TX1"
R6529	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W		SW1905	1AV4S10B5650J		ISH 1P-1TX1"
R6530	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W			1AV4S10B0900J	"SWITCH,PU	
R6531	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W			1LB4S10B0200J	"SWITCH,PU	ISH 1P-1TX1"
R6532	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W					
R6533	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W					
R6534	RGF4702JTCANL	MT-GLAZE	47K JA 1/10W			CRYSTAL / F		
R6535	RGF1002JTCANL	MT-GLAZE	10K JA 1/10W		X5500	1AV4V10B8920G		AL 54.100MHZ"
R6536	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W		X801	1AV4V11B1771G	"OSC,CERAN	IIC 8.00MHZ"
R6537	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W					
R6538	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W					
R6539	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W					
R6540	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W					
R6541	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W					
R6542	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W					
R6543	RGFR000ZTCANL	MT-GLAZE	0.000 ZA 1/10W					
R6544	RGF47R0JTCANL	MT-GLAZE	47 JA 1/10W					

Schematic Location	Part No.	Description
	MISCELLAN	EOUS
A1902	1AV4U20B99401	"UNIT,REMOCON RECEIVER"
⚠ A6100	1AV4F1BAZ0070	"TUNER,U/V"
⚠ E001	1AV4T40C11900	LCD(T370XW02 VC02)
K1003	1LB4J31B01101	"TERMINAL, BOARD"
K1004	1LB4J12B11700	"JACK,RCA-9"
K1005	1LB4J12B11600	"JACK,RCA-6"
K19FRA	1AV4J10AR061N	"PLUG,6P"
K5LV	1AV4J10XE300G	"PLUG,30P"
K6501	1AV4J11B8591G	"SOCKET,IF(HDMI) 19P"
K6502	1AV4J11B8591G	"SOCKET,IF(HDMI) 19P"
K6503	1AV4J11B8591G	"SOCKET,IF(HDMI) 19P"
K8B	1AV4J10AU135N	"PLUG,13P"
K8FRA	1AV4J10EA063N	"PLUG,6P"
K8L	1AV4J10AU055N	"PLUG,5P"
KSP	1AV4J10EA043N	"PLUG,4P"
KUSB2	1AV4J12B4720N	"JACK,PHONE D3.5"
SP901	1LB4A10B08801	"SPEAKER,8"
SP902	1LB4A10B08801	"SPEAKER,8"
⚠ W901	1AV4W10B19802	"CORD,POWER-2.0MK-VTR-02"

1AA4W30B54800

"CORD 30P-30P(LVDS)"

⚠ WK5LV


Schematic Location Part No.	Description
-----------------------------	-------------


POWER BOARD

⚠ U901 1AV4U20C17401 "UNIT,POWER"


COMPONENT AND TESTPOINT LOCATIONS

MAIN BOARD PARTS SIDE

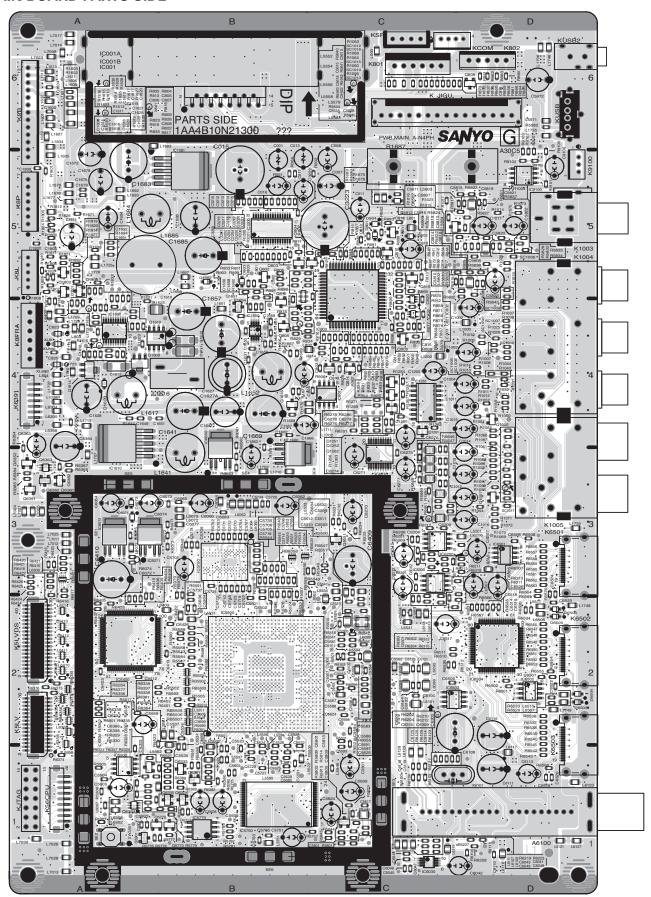


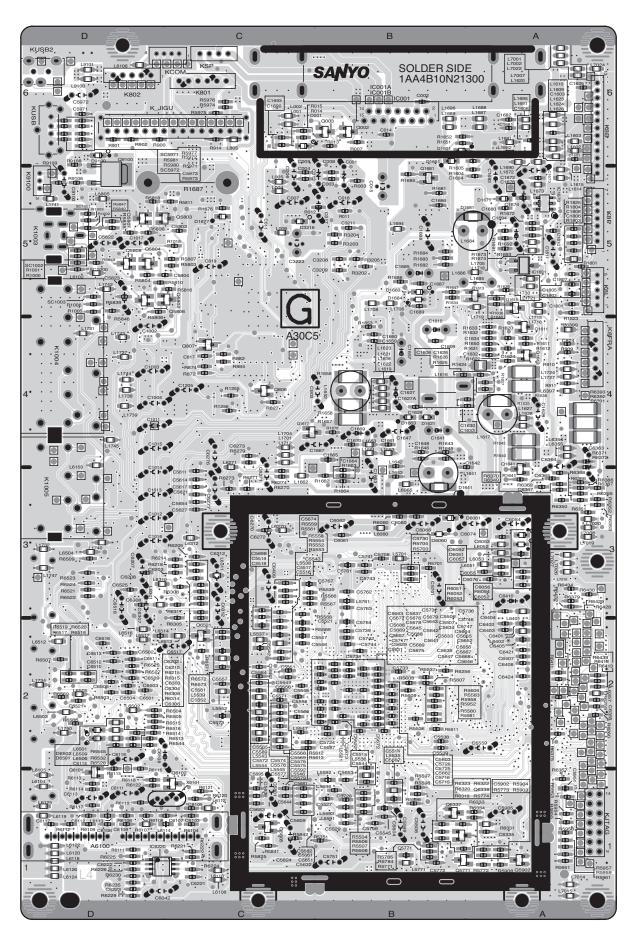


CONTROL BOARD PART SIDE




CONTROL BOARD SOLDER SIDE



BLOCK DIAGRAM POWER LINES

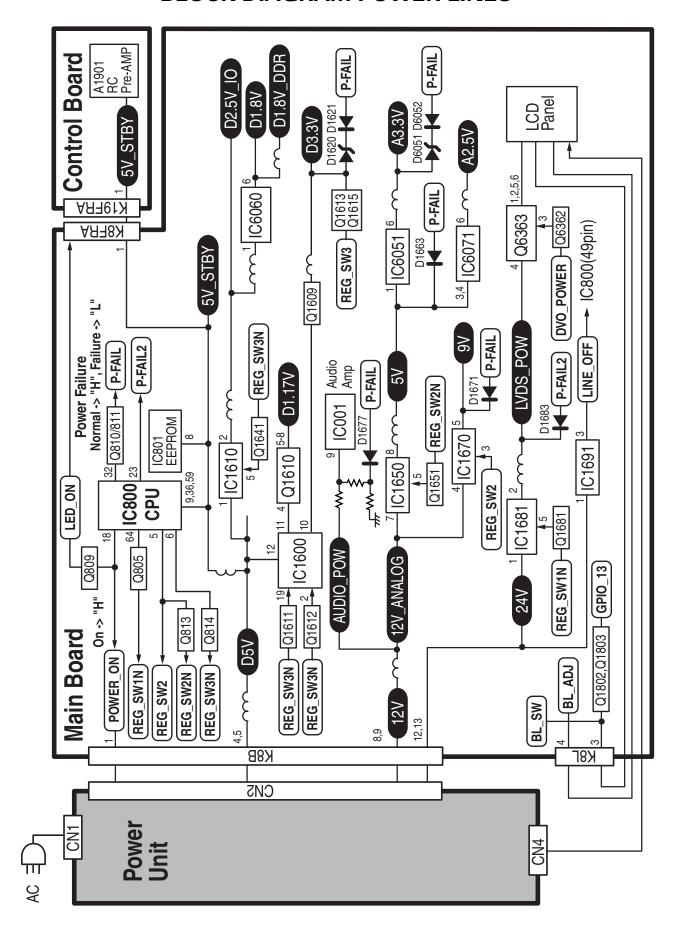


BLOCK DIAGRAM SIGNAL LINES

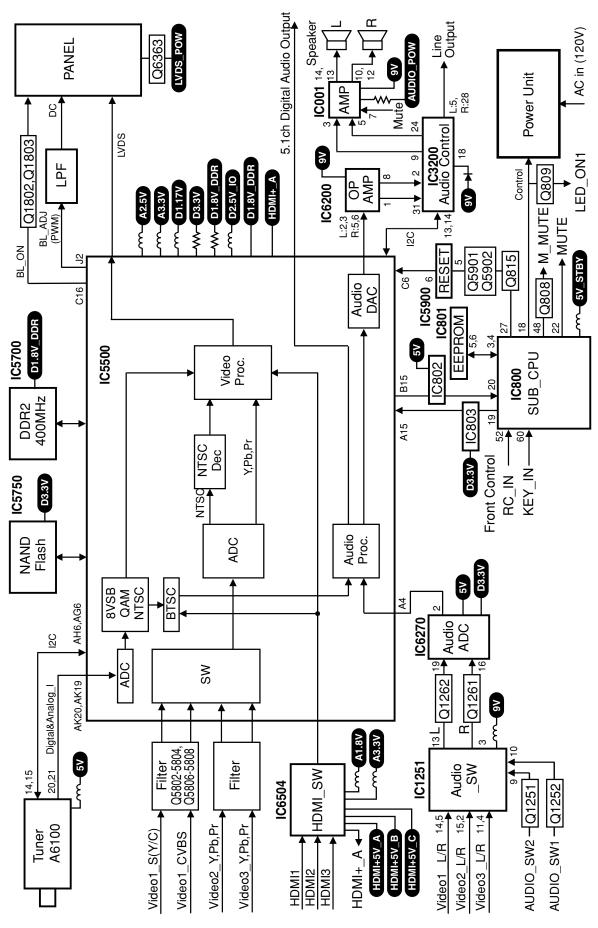


IC BLOCK DIAGRAMS


IC001, Audio AMP

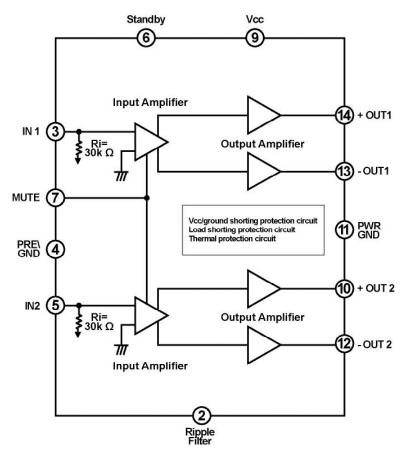


IC1251 Video and Audio Select

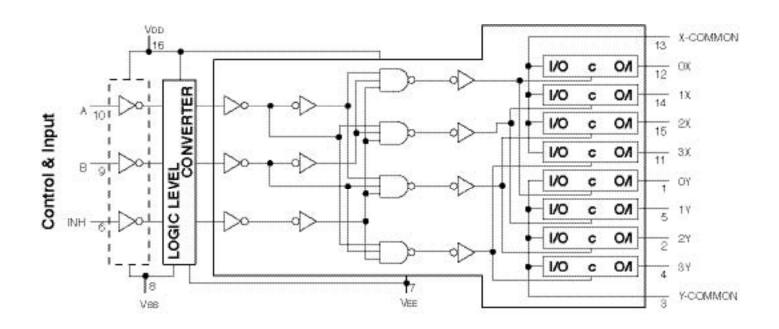


IC1600, DC to DC Converter

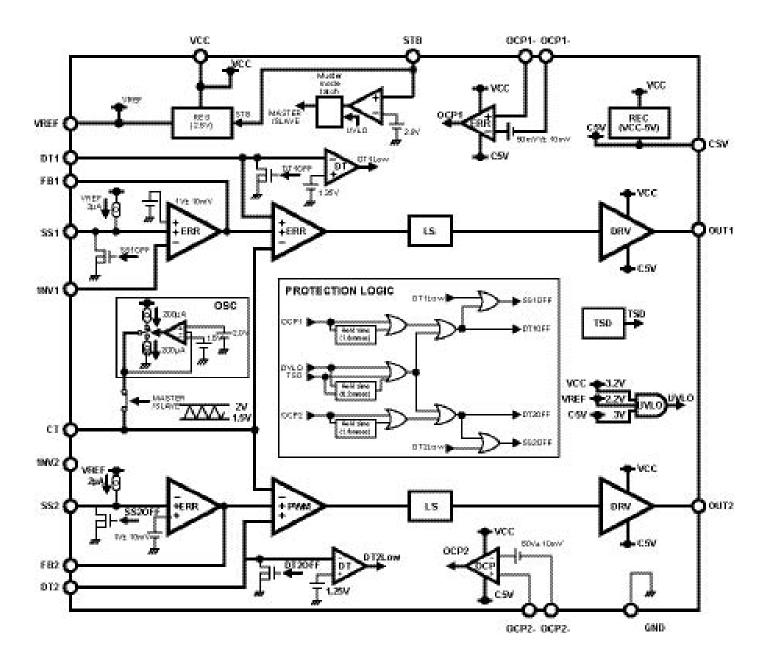


IC1650, DC to DC Converter

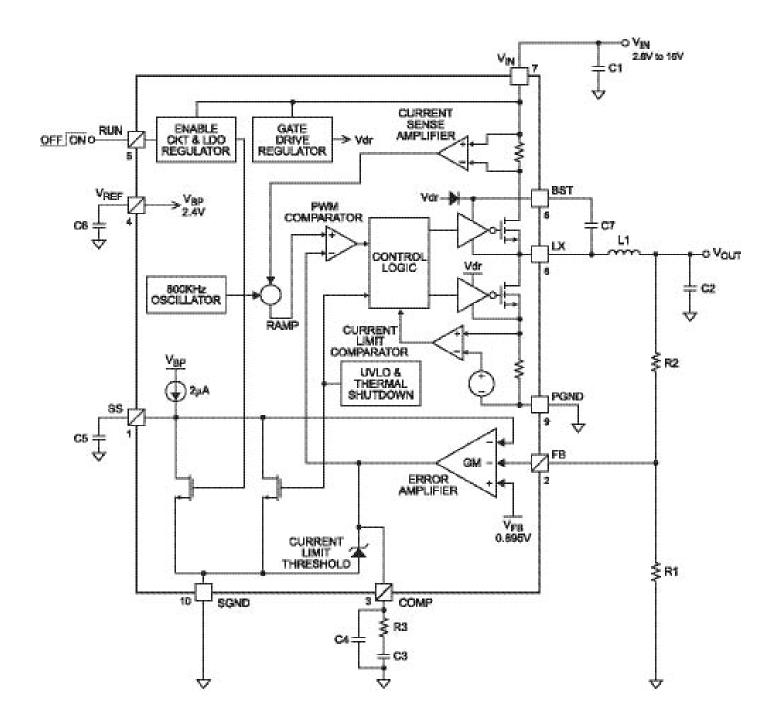


IC5500 Screen Controller and video processor

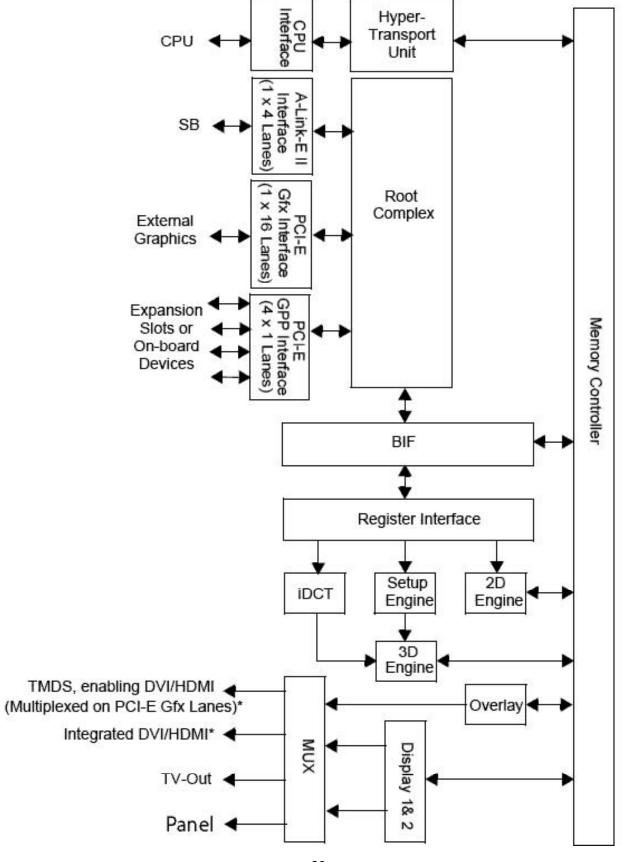


IC5700, DDR: Double Data Rate SDRAM

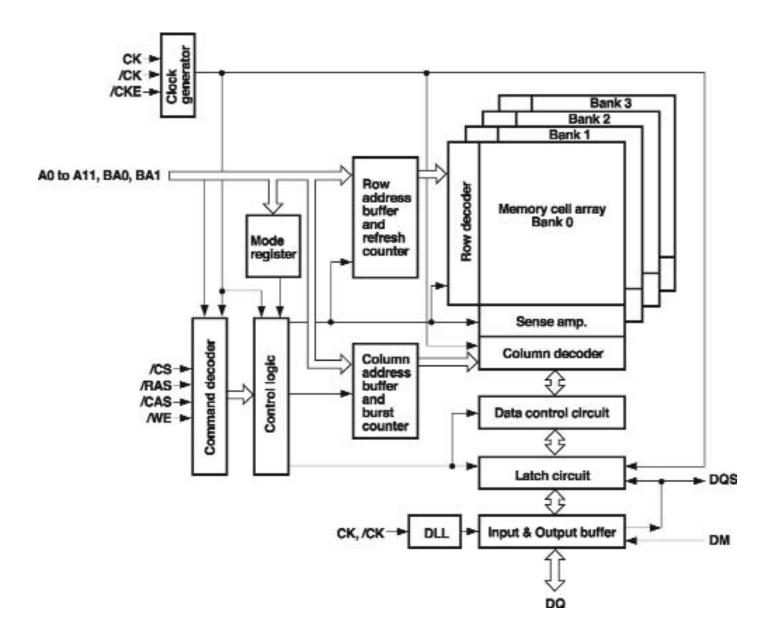


IC6270, Audio A/D

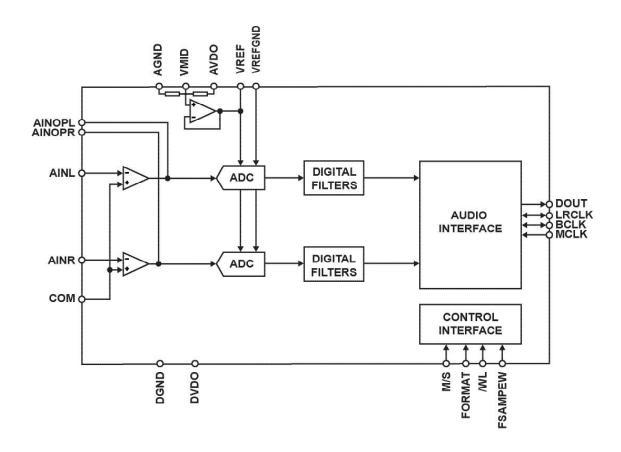

IC3200, Audio Controller

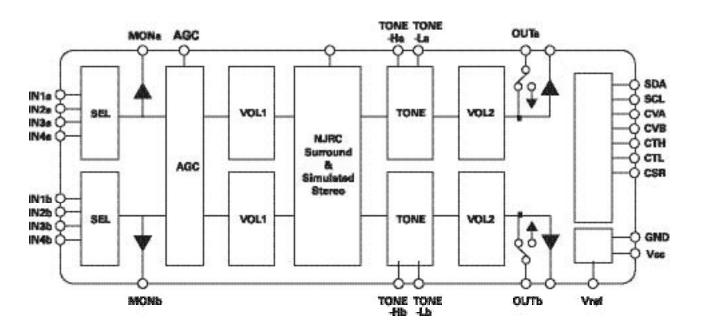


IC6400, LVDS Transmitter

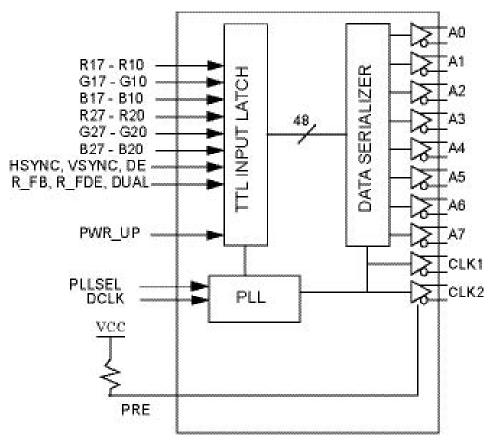


IC5900, Voltage detecting delay circuit


BLOCK DIAGRAM

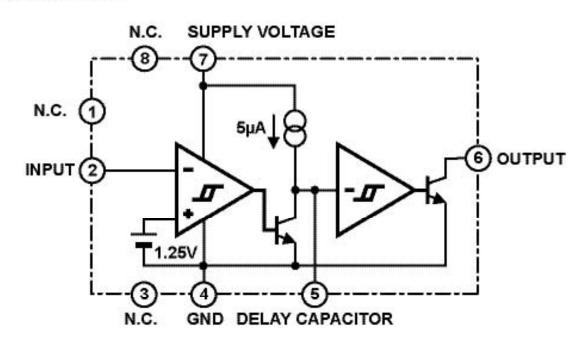

IC1670, DC to DC Converter

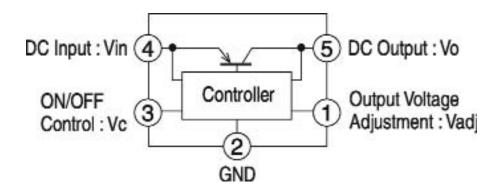



IC6504, HDMI Switch selector

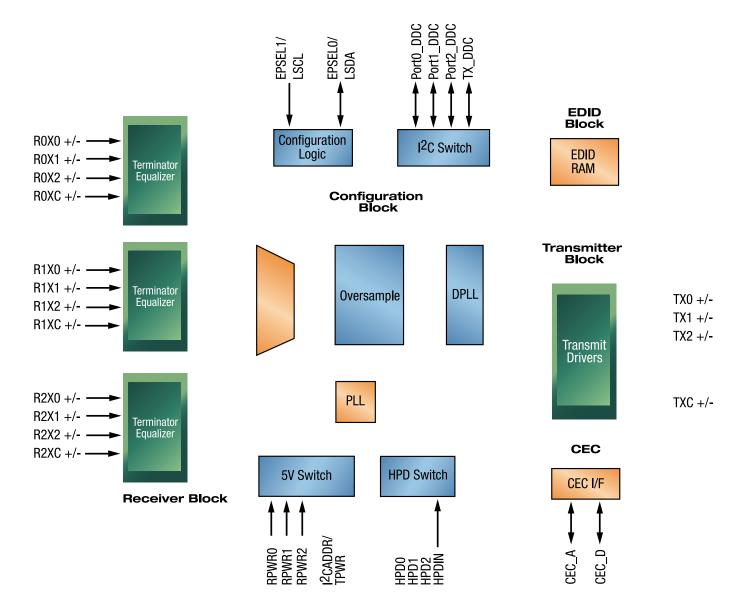

TROUBLESHOOTING FLOW CHARTS


NO POWER

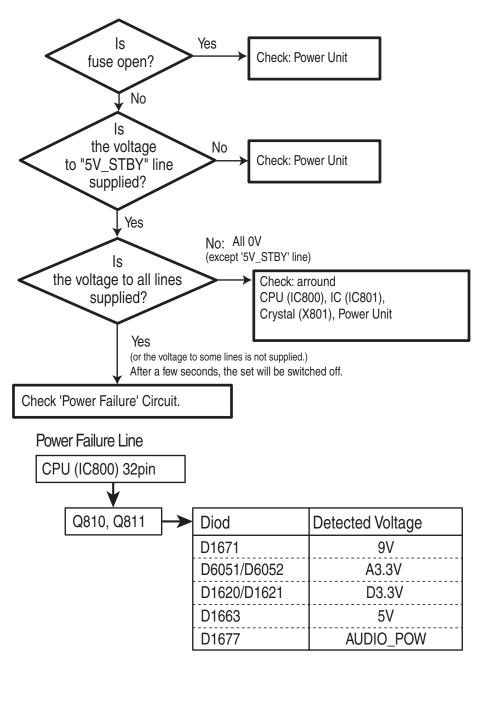




TROUBLESHOOTING FLOW CHARTS (CONT.)

NO VIDEO

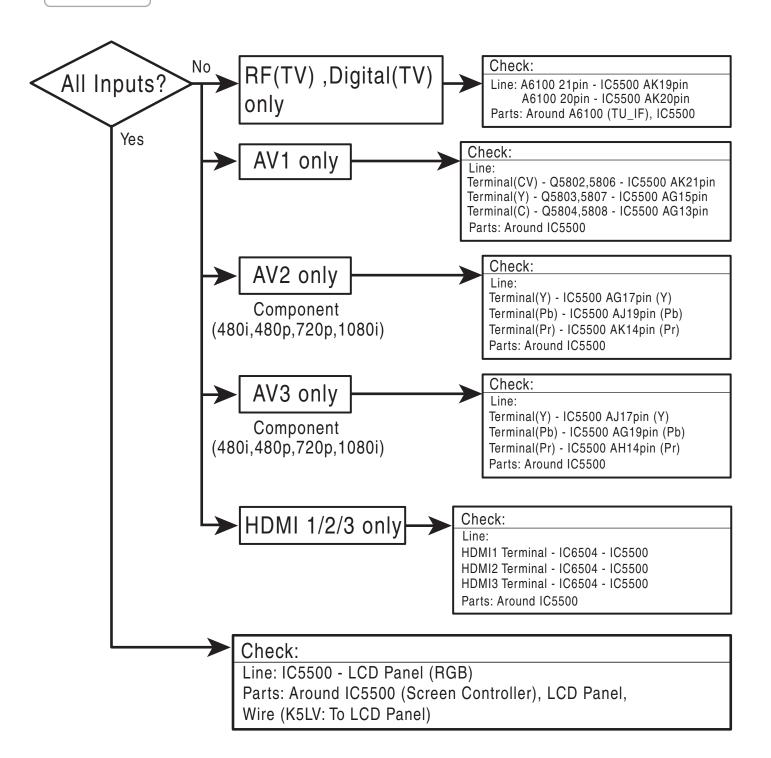

TROUBLESHOOTING FLOW CHARTS (CONT.)

NO AUDIO

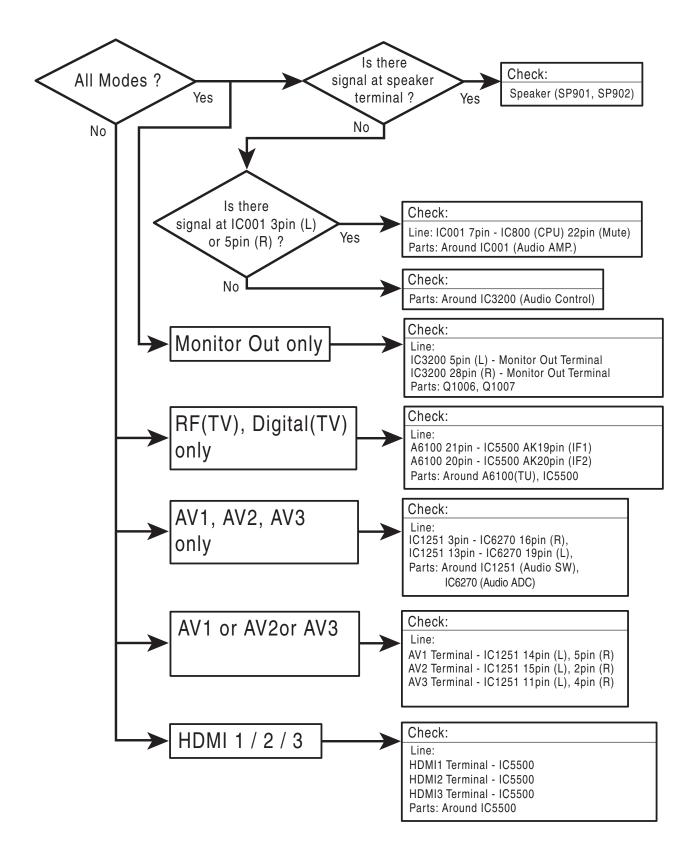

CONTROL PORT FUNCTIONS


System Control (CPU : IC800)

Pin	Name	Function	I/O	Description
1	P12/SCK0	Reserve	OUT	(OPEN)
2	P13/SO1	Reserve	OUT	(OPEN)
3	P14/SI1/SB1	IIC-BUS for NV	I/O	(DATA) Active 'L' for IIC data NV
4	P15/SCK1	IIC-BUS for NV	OUT	(CLOCK) Active 'L' for IIC clock NV
5	P16/T1PWML	REG SW2	OUT	REG SW2 (ON High OFF Low)
6	P17/T1PWMH/BUZ	REG SW3	OUT	REG SW3 (ON High OFF Low)
7	PWM2	Reserve	OUT	(OPEN)
8	PWM3	(Vcc)	IN	(Reserve)
9	VDD2	Power IN	IN	5V(5Vdc±10%)
10	VSS2	Vss	IN	GND (0Vdc)
11	P00	Category2	IN	Hard option
12	P01	Category1	IN	Hard option
13	P02	Category0	IN	Hard option
14	P03	Panel Size2	IN	Hard option
15	P04	Panel Size1	IN(OUT)	Hard option
16	P05/CKO	Panel Size0	IN(OUT)	Hard option
17	P06/T6O	LED CNTRL	OUT	LED control Power on:High, Standby:Low
18	P07/T7O	TV Relay out	OUT	POWER Relay SW ON High OFF Low
19	P20/UTX/INT4/T1IN	UART OUT	OUT	Digital Module microcomputer piece confidence
20	P21/URX/INT4/T1IN	UART IN	IN	Digital Module microcomputer piece confidence
21	P22/INT4/T1IN	PC Standby LED	OUT	(OPEN)
22	P23/INT4/T1IN	Audio MUTE	OUT	MUTE ON High OFF Low
23	P24/INT5/T1IN	Power Fail-2 IN	IN	LVDS Power Fail
24	P25/INT5/T1IN	Reserve	OUT	(OPEN)
25	P26/INT5/T1IN	Reserve	IN	(GND)
26	P27/INT5/T1IN	Reserve	OUT	(OPEN)
27	PB7	RESET_TV	OUT	Low (Reserve)
28	PB6	VS_DET	IN	(GND)
29	PB5	GonS_DET	IN	(GND)
30	PB4	Reserve	OUT	(OPEN)
31	PB3	Reserve	OUT	(OPEN)
32	PB2	Power Fail-1 IN	IN	TV Power Error (L)/Others (H)
33	PB1	Reserve	OUT	(OPEN)
34	PB0	Solution	IN	Solution Option (High:US1H Low:US1F)
35	VSS3	Vss	IN	GND(0Vdc)
36	VDD3	Power IN	IN	5V(5Vdc±10%)
37	PC7	DBGP2	IN	Terminal for De-Bug 3
38	PC6	DBGP1	I/O	Terminal for De-Bug 2
39	PC5	DBGP0	I/O	Terminal for De-Bug 1
40	PC4	CLK	IN	Writing on bord (CLK)
41	PC3	DATA0	I/O	Writing on bord (DATA0)
42	PC2	ENA/DATA1	I/O	Writing on bord (ENA/DATA1)
43	PC1	Ack out	OUT	For factory use
44	PC0	STATUS in	IN	For factory use
45	P86/AN6	Reserve	OUT	(OPEN)
46	P85/AN5	Reserve	OUT	(OPEN)
47	P84/AN4	Reserve	IN	GND or Pull-up
48	P83	M_OUT MUTE	OUT	Monitor Out Mute MUTE ON Low OFF High
49	P70/INT0/T0LCP/AN8	LINE OFF	IN	Detect AC Voltage Reduction (Normal: High)
50	P71/INT1/T0HCP/AN9	Reserve	OUT	(OPEN)
51	P72/INT2/T0IN	Reserve	OUT	(OPEN)
	-	1	_	` '


Pin	Name	Function	I/O	Description
52	P73/INT3/T0IN	Rcin	IN	RC Input
53	RES	RESET in	IN	Microcomputer Reset RESET Low Normal High
54	XT1/AN10	Xin	IN	Conect to VDD1
55	XT2/AN11	Reserve	OUT	(OPEN)
56	VSS1	Vss	IN	GND(0Vdc)
57	CF1	Xti	IN	Main Clock IN (Fosc=8MHz)
58	CF2	Xto	OUT	Main Clock OUT (Fosc=8MHz)
59	VDD1	Power IN	IN	5V(5Vdc±10%)
60	AN0	Key in	IN	Key input
61	AN1	AFT(Reserve)	IN	GND
62	P82	PANEL READY	IN	Panel Ready (for PDP) OK_High _NG_Low
63	P10/SO0	VS-ON	OUT	VS-ON (for PDP) ON High OFF Low
64	P11/SI0/SB0	REG SW1	OUT	REG SW1(ON High OFF Low)

SIGNAL FLOW CHARTS

WHEN A DIGITAL-RF CHANNEL IS SELECTED

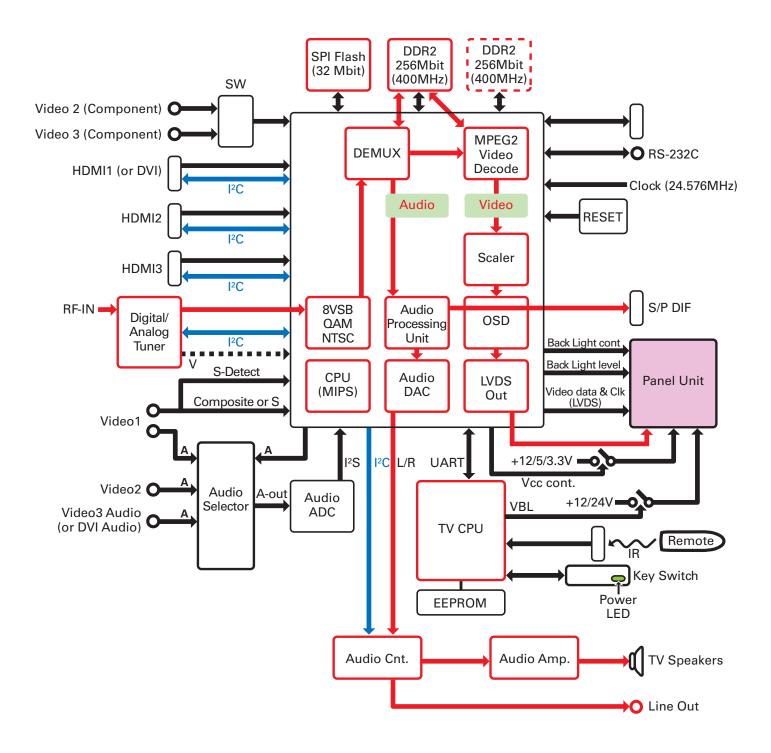


WHEN AN ANALOG-RF CHANNEL IS SELECTED

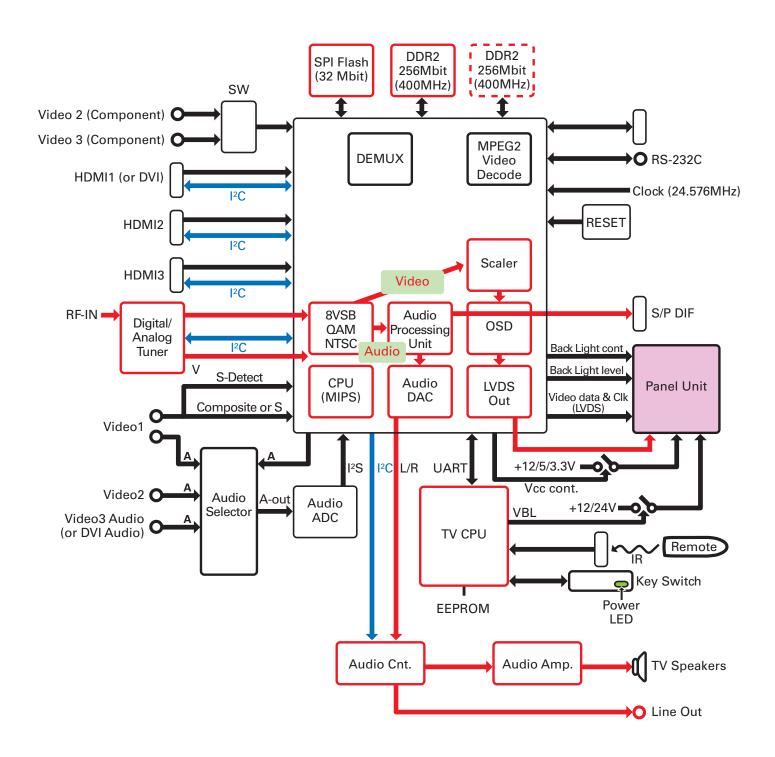


SIGNAL FLOW CHARTS (CONT.)

WHEN A VIDEO INPUT (VIDEO1) IS SELECTED

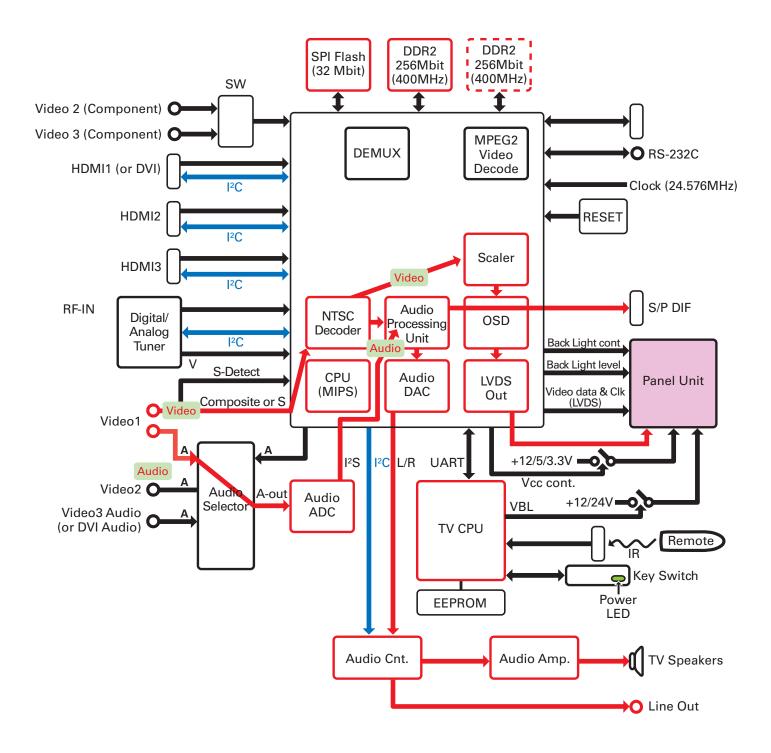


WHEN VIDEO 2 IS SELECTED

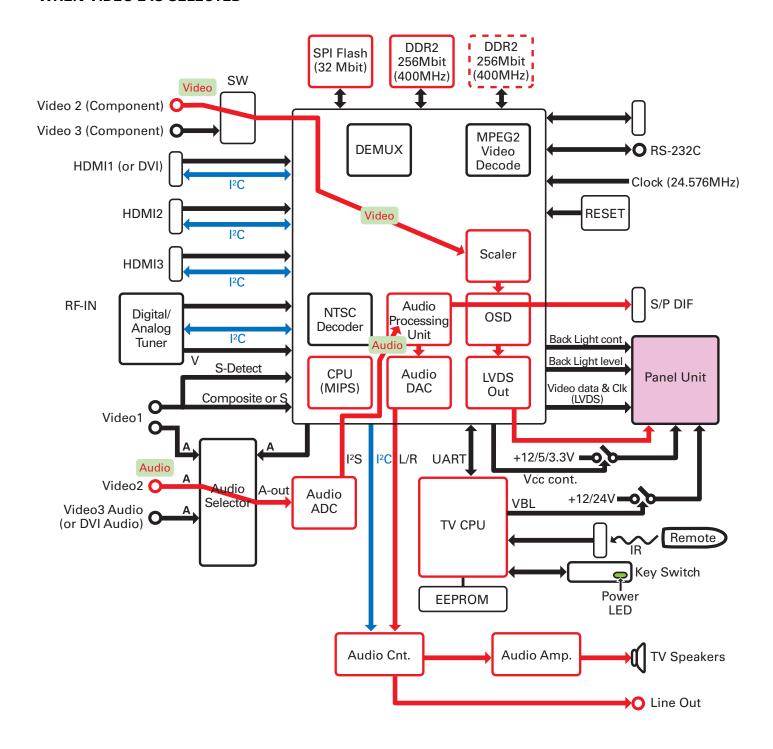


SIGNAL FLOW CHARTS (CONT.)

WHEN VIDEO 3 IS SELECTED

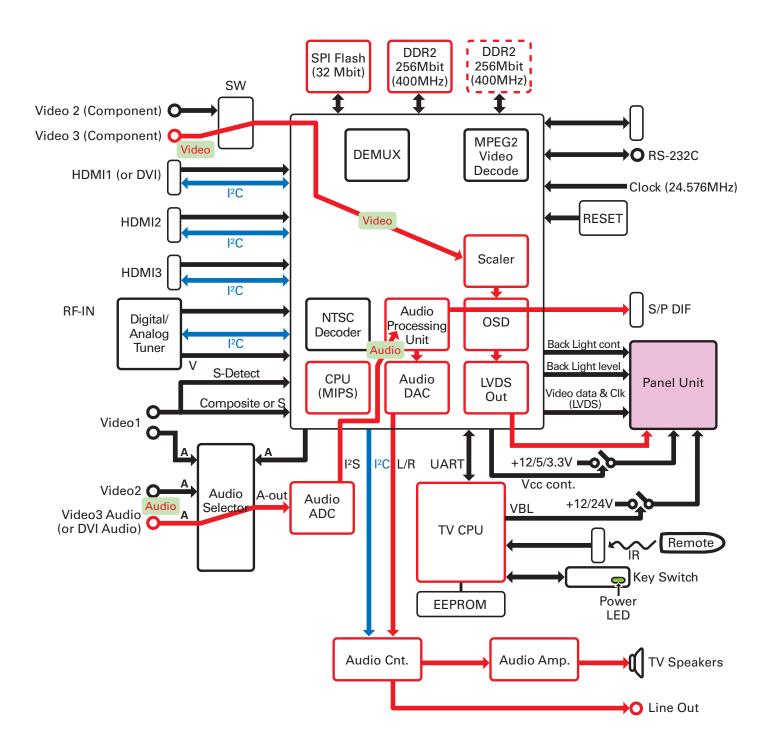


WHEN HDMI-3 IS SELECTED

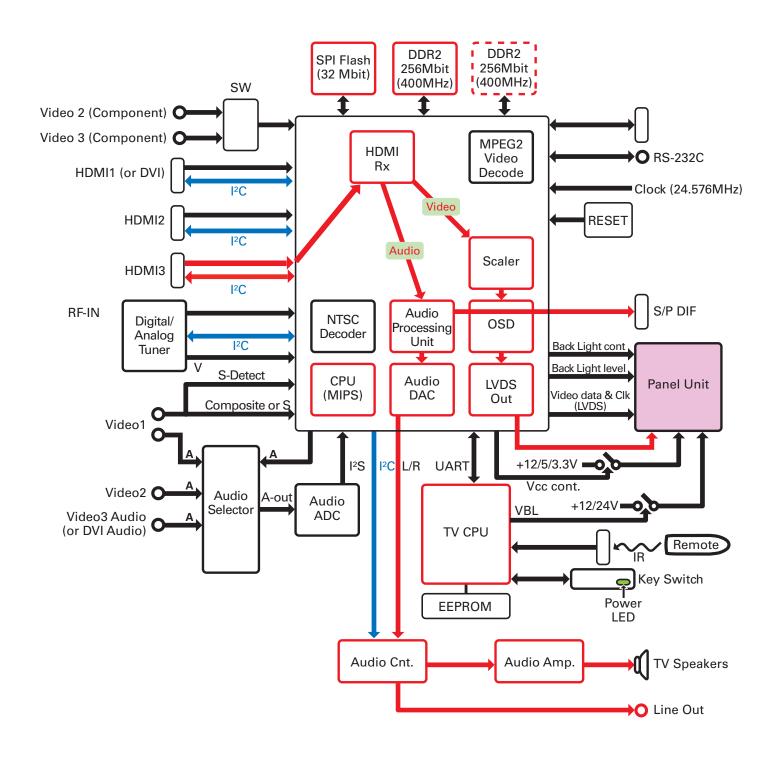


SIGNAL FLOW CHARTS (CONT.)

WHEN HDMI-2 IS SELECTED

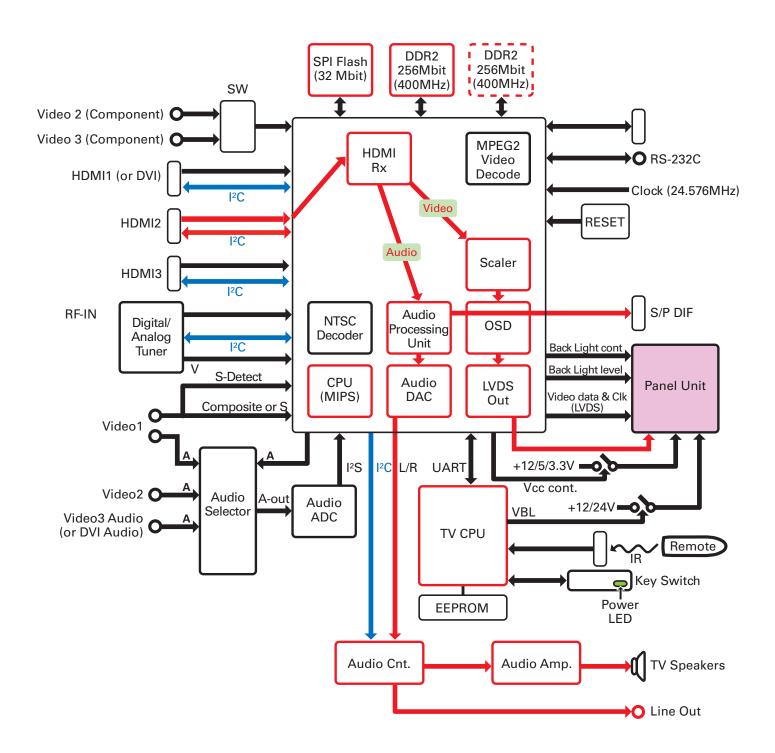

WHEN HDMI-1 IS SELECTED (DVI)

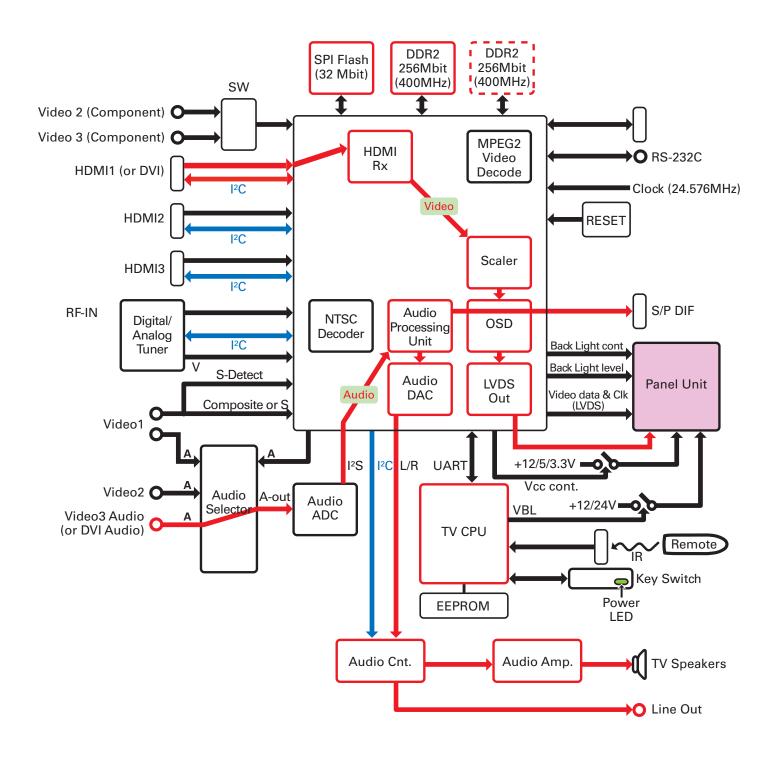

SCHEMATIC NOTES

NOTES ON SCHEMATIC DIAGRAMS

- 1. All resistance values in ohms K=1,000 M=1,000,000.
- 2. Resistors specified with resistance value are "1/6DJ."
- 3. Resistors specified with type of resistor, tolerence and resistance value are "1/4."
- 4. Unless otherwise noted on schematic, all capacitor values less than 1 are expressed in μF (Micro Farad), and the values more than 1 are in pF.
- 5. All capacitors are 50 WV rating unless oterhwise noted.
- 6. Unless otherwise noted on schematic, voltage reading taken with VOM from point indicated to chassis ground. Voltage reading taken using color-bar signal VHF channel 5, all controls at normal. Line voltage at 120 volts. Some voltages may vary with signal strength.
- 7. Waveforms were taken with color-bar signal and controls set for normal picture. Waveforms marked with an * may vary with signal strength.
- 8. The Symbol (indicates a fusible resistor, which protects the circuit from possible short circuits.
- 9. Parts enclosed with are related with X-radiation.
- 10. Isolation border line. Cold Side Hot Side
- 11. Schematic part location numbers may not always match the schematic symbols.

The schematic symbols and part descriptions are correct and should be used.

The part descriptions will be listed under the location number in the parts list.



ELECTROSTATICALLY SENSATIVE DEVICES

Many solid-state devices (especially Integrated Circuits) are Electrostatically Sensitive, and, therefore, require special handling techniques as described under "Servicing Electrostatically Sensitive Devices," on page two in this service literature.


SERVICE NOTES:

- 1. When replacing parts on circuit boards, clamp the lead wires to terminals before soldering.
- 2. When replacing high wattage resistors on circuit board, keep the resistor body 10 mm (3/8) from circuit board.
- 3. Keep wires away from high voltage and high temperature components.


PRODUCT SAFETY NOTICE

THE COMPONENTS DESIGNATED BY A ON THIS SCHEMATIC DIAGRAM DESIGNATE COMPONENTS WHOSE VALUES ARE OF SPECIAL SIGNIFICANCE TO PRODUCT SAFETY. SHOULD ANY COMPONENT DESIGNATED BY A NEED TO BE REPLACED, USE ONLY THE PART DESIGNATED IN THE PARTS LIST. DO NOT DEVIATE FROM THE RESISTANCE, WATTAGE AND VOLTAGE RATINGS SHOWN.

IC, DIODE, AND TRANSISTOR PIN LAYOUTS

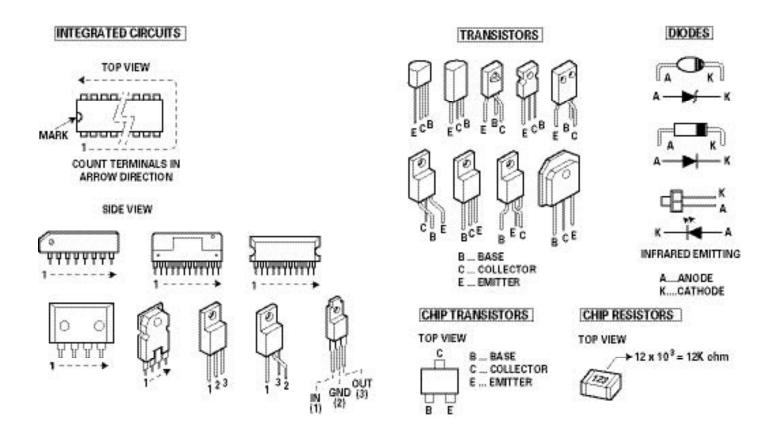


PC BOARD CONNECTIONS AND LOCATIONS

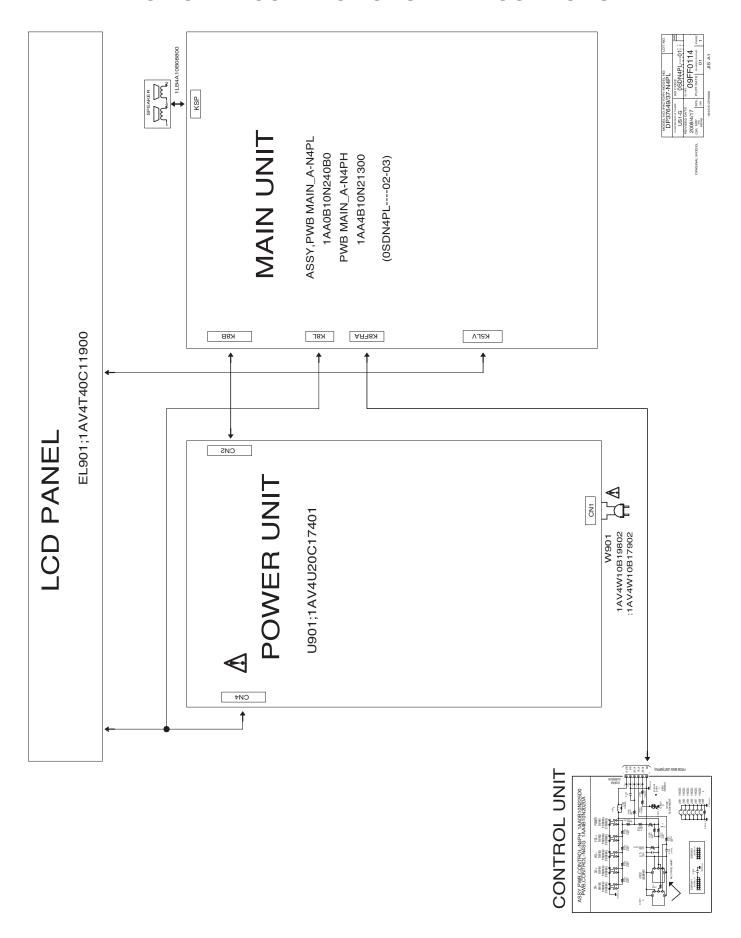


CAPACITOR AND RESISTOR CODE CHART

CAPACITOR (Example)

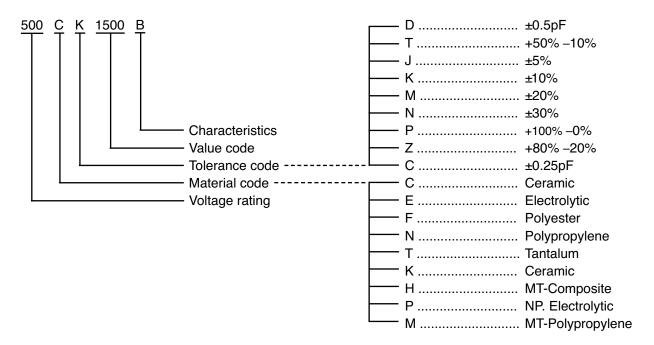


RESISTOR (Example)

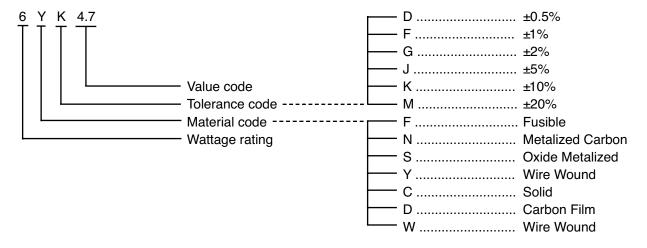

For parts or service contact

Sanyo Manufacturing Corporation P.O. Box 2000 3333 Sanyo Road Forrest City, Arkansas 72335-2000

August 2009 SMC Published in Mexico

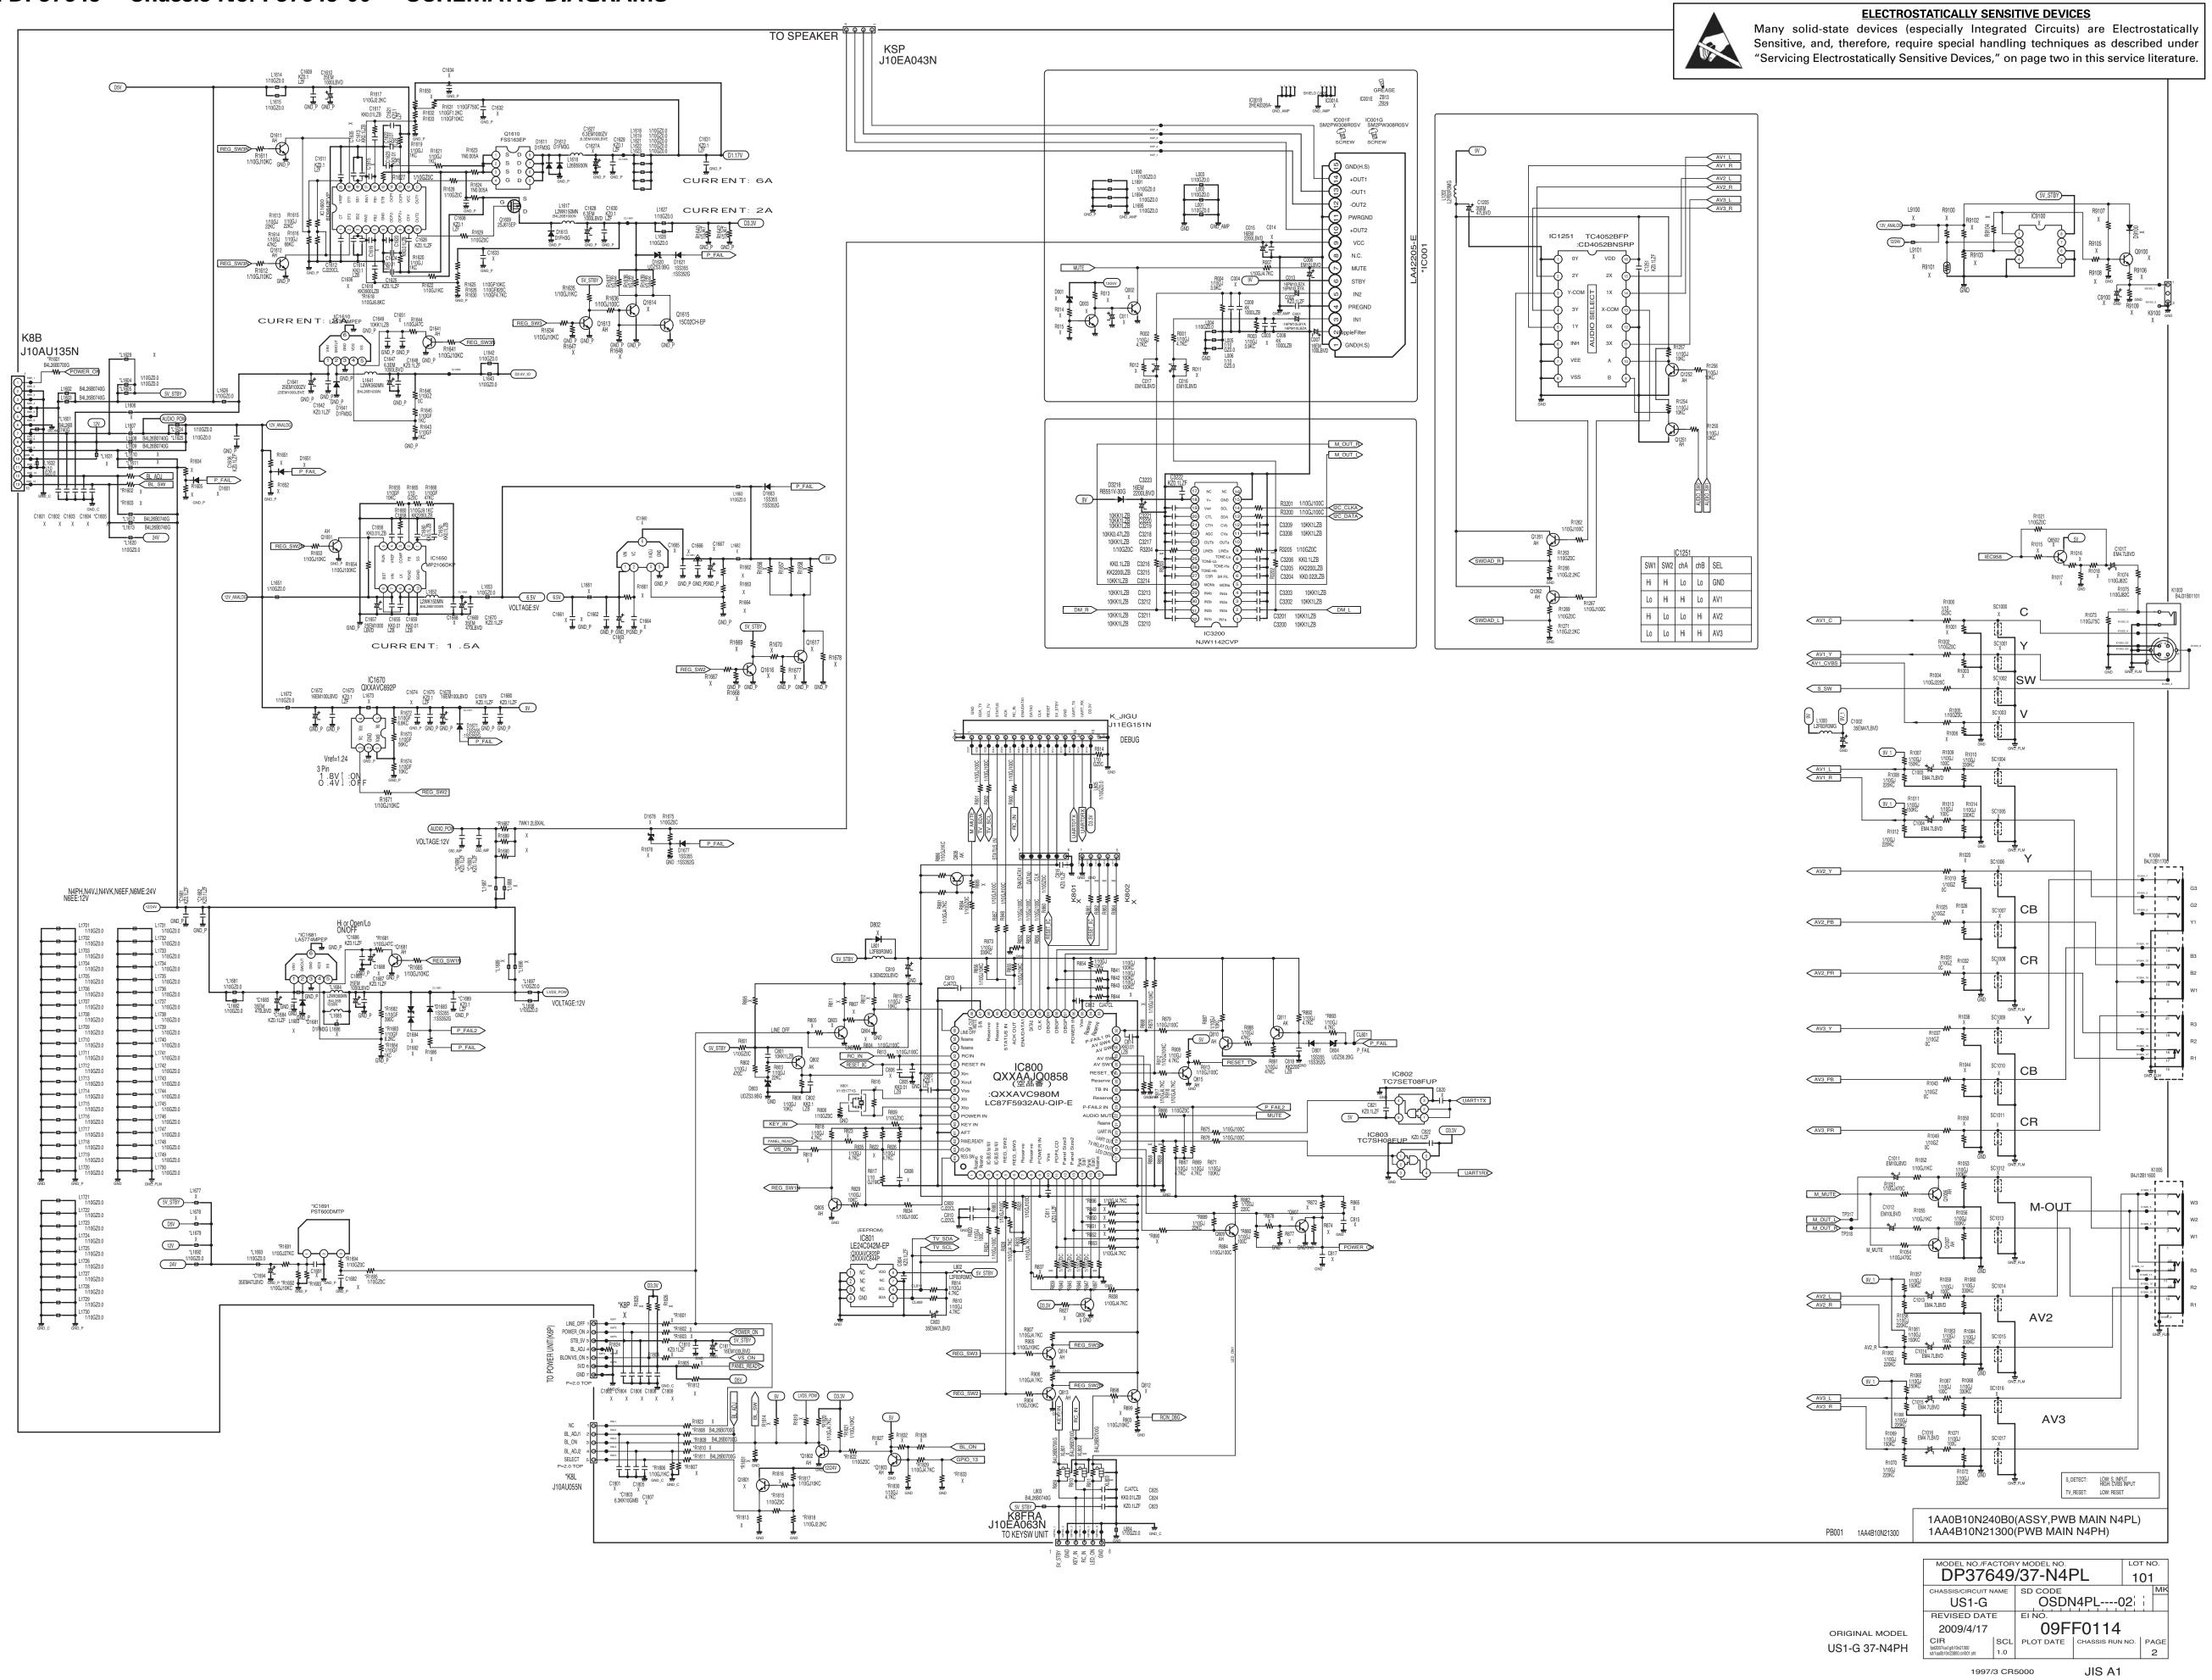

MODEL DP37649 Chassis No. P37649-00 SCHEMATIC DIAGRAMS

